

AIRPORT DIAGRAM

AL-291 (FAA)

NORFOLK INTL (O.R.F)
NORFOLK, VIRGINIA

ATIS
127.15
NORFOLK TOWER
120.8 257.8
GND CON
121.9
CLNC DEL
118.5

D



JANUARY 2015
ANNUAL RATE OF CHANGE
0.0° W

FIELD
ELEV
27

ELEV 16

BLAST PAD
200 X 150

ILS HOLD

ILS
CRITICAL
AREA

ARRIVAL TERMINAL

INTERNATIONAL GATE

FUEL DISPENSING

FIRE STATION

DEPARTURE TERMINAL

ELEV 18

138.9°

487.5 X 150

AIR CARGO

LAHSO

LAHSO

FUEL FARM

U.S. CUSTOMS

ILS HOLD

ILS HOLD

TWR 165

BLAST PAD
200 X 150

ELEV 18

ILS
CRITICAL
AREA

ELEV 22

GENERAL
AVIATION
AREA

RWY 05-23

PCN 54 R/B/X/T
S-150, D-200, 2S-175,
2D-350, 2D/2D2-475

RWY 14-32

PCN 19 F/C/X/T
S-75, D-100, 2S-127

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

76°12.5'W

76°12.0'W

76°11.5'W

AIRPORT DIAGRAM

NORFOLK, VIRGINIA
NORFOLK INTL (O.R.F)

NE-3, 20 JUL 2017 to 17 AUG 2017

NE-3, 20 JUL 2017 to 17 AUG 2017