

18088

AIRPORT DIAGRAM

BELLINGHAM INTL (BLI)
BELLINGHAM, WASHINGTON

AL-45 (FAA)

ATIS
134.45
BELLINGHAM TOWER ★
124.9 379.3
GND CON
127.4 379.3

D

ELEV

9L

163

B

163.3°

48°48.0'N

RWY 16-34
PCN 57 F/A/W/T
S-75, D-160, 2D-250

CARGO

COMMERCIAL
AIRCRAFT
PARKING

COMMERCIAL
TERMINAL
US
CUSTOMS

TWR
247

FBO/GENERAL AVIATION
TERMINAL

TRANSIENT
PARKING

GENERAL
AVIATION
HANGARS

FIRE
STATION

HANGAR

NOTE: THIS AREA NOT VISIBLE
FROM TOWER

JANUARY 2015
ANNUAL RATE OF CHANGE
0.2° W



NW-1, 12 SEP 2019 to 10 OCT 2019

NW-1, 12 SEP 2019 to 10 OCT 2019

HS 1

HS 2

FIELD
ELEV
171

34

343.3°

48°47.0'N

122°32.5'W

122°32.0'W

122°31.5'W

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

AIRPORT DIAGRAM

18088

BELLINGHAM, WASHINGTON
BELLINGHAM INTL (BLI)