



SOCAL APP CON  
126.7 370.95  
BOB HOPE D-ATIS  
134.5  
BURBANK TOWER  
118.7 254.3  
SANTA MONICA ATIS  
119.15  
SANTA MONICA TOWER ★  
120.1 257.8  
VAN NUYS ATIS  
127.55  
VAN NUYS TOWER ★  
119.3 239.0



See following page  
for Arrival Routes.

THRNE  
11000  
10000

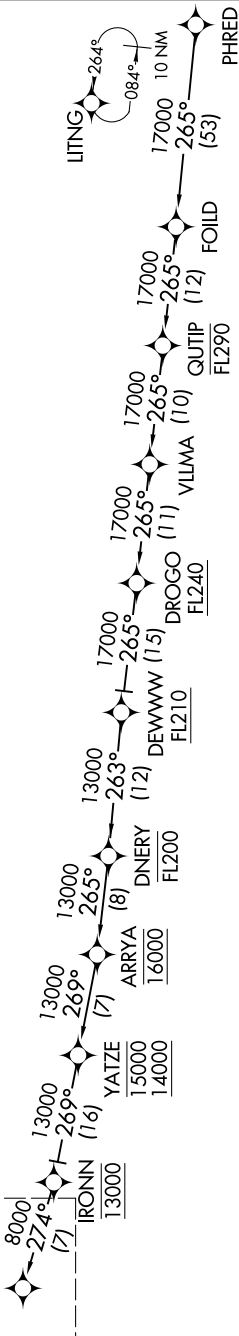

NOTE: RADAR required.

NOTE: RNAV 1.

NOTE: DME/DME/IRU or GPS required.

NOTE: Turbojet and turboprop aircraft only.

NOTE: Expect local area altimeter setting reaching FL200.

NOTE: Chart not to scale.

PHRED TRANSITION (PHRED.THRNE2)

(CONTINUED ON FOLLOWING PAGE)