


LOC I-PQI <b>108.7</b>	APP CRS <b>003°</b>	Rwy Idg TDZE Apt Elev	<b>7441</b> <b>478</b> <b>534</b>
---------------------------	------------------------	-----------------------------	---

# ILS or LOC RWY 1

PRESQUE ISLE INTL (PQI)

DME required for LOC only.	MALS R	MISSED APPROACH: Climb to 1100 then climbing left turn to 3000 direct PQI VOR/DME and hold, continue climb-in-hold to 3000.
<p>For inop ALS, increase S-LOC Cat C/D visibility to 1 1/2 SM. DME from PQI VOR/DME. Simultaneous reception of I-PQI and PQI DME required.</p> <p>-30°C</p>		



AWOS-3PT <b>118.025</b>	BOSTON CENTER <b>124.75 239.05</b>	CLNC DEL <b>121.6</b>	UNICOM <b>122.8 (CTAF)</b>	<b>122.6</b>
----------------------------	---------------------------------------	--------------------------	-------------------------------	--------------

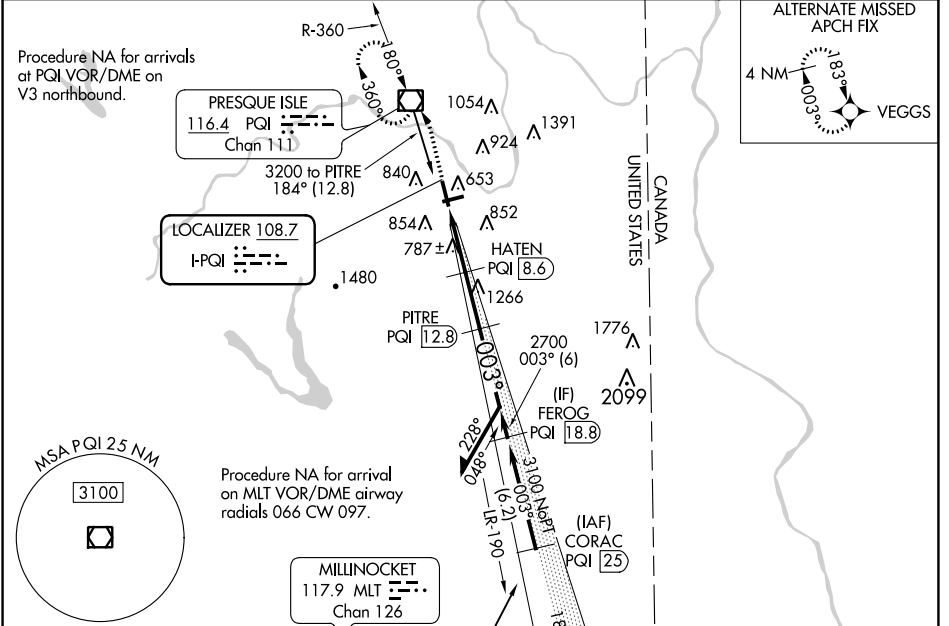

NE-1, 22 APR 2021 to 20 MAY 2021

NE-1, 22 APR 2021 to 20 MAY 2021

ELEV 534	TDZE 478
----------	----------

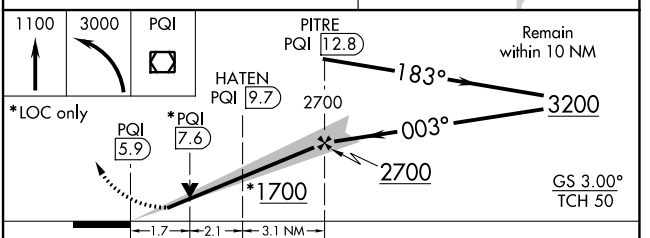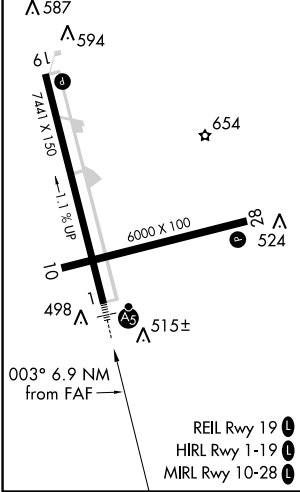

CATEGORY	A	B	C	D
S-ILS 1	678-1/2 200 (200-1/2)			
S-LOC 1	1040-1/2	562 (600-1/2)	1040-1 1/4	562 (600-1 1/4)
CIRCLING	1140-1 606 (700-1)	1160-1 626 (700-1)	1300-2 1/4 766 (800-2 1/4)	1360-2 3/4 826 (900-2 3/4)