

LOC/DME I-OWA	APP CRS	Rwy Idg	5500
109.55	302°	TDZE	1145
Chan 32(Y)		Apt Elev	1145

ILS or LOC RWY 30

OWATONNA DEGNER RGNL (OWA)

▼

▲ NA


When local altimeter setting not received, use Faribault altimeter setting and increase all DA 41 feet and all MDA 60 feet.
Increase S-LOC 30 Cats C/D visibility to 1½ mile and Circling Cat C visibility to 1½ and Cat D Circling visibility to 2½.

MALSR

AS

MISSED APPROACH Climb to 2000 then climbing right turn to 3000 direct FOW VOR/DME and hold.

AWOS-3	ROCHESTER APP CON ★	UNICOM
128.325	119.8 251.125	122.7 (CTAF) 0

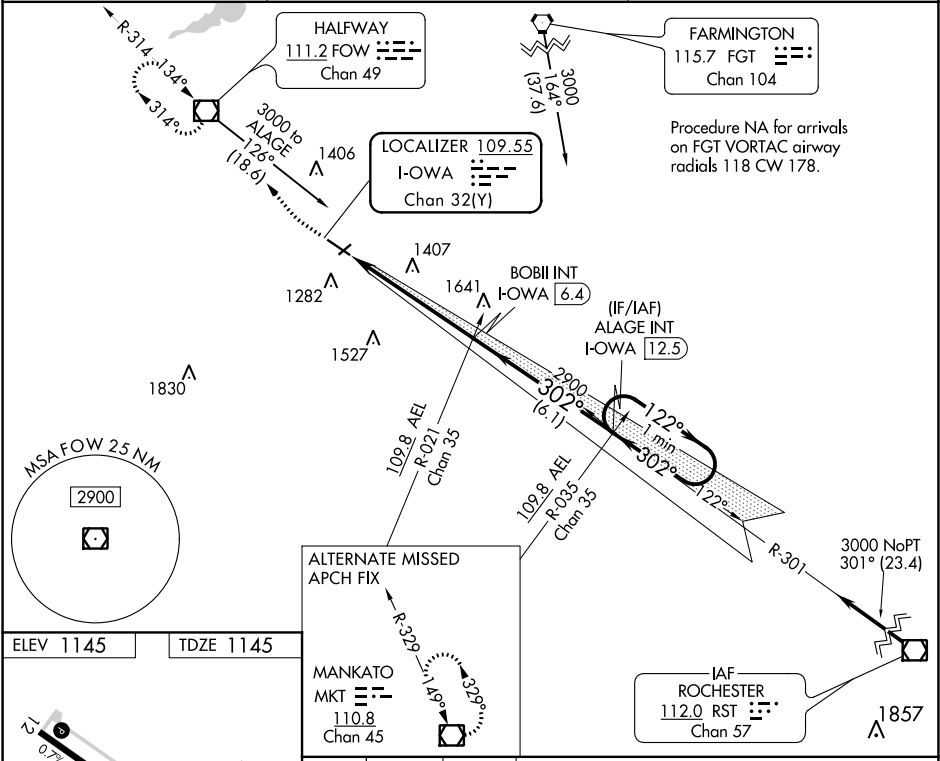

2000

3000

FOW

*LOC only

*I-OWA 2.8

BOBII INT I-OWA 6.4

ALAGE INT I-OWA 12.5

One Minute Holding Pattern

1.7 NM

3.7 NM

6.1 NM

302°

122°

3000

GS 3.00° TCH 50

MIRL Rwy 5-23

REIL Rwys 5, 12, and 23

HIRL Rwy 12-30

FAF to MAP 5.4 NM

Knots 60 90 120 150 180

Min:Sec 5:24 3:36 2:42 2:10 1:48

CATEGORY	A	B	C	D
S-ILS 30	1345-½ 200 (200-½)			
S-LOC 30	1740-½ 595 (600-½)		1740-1¼ 595 (600-1¼)	
CIRCLING	1740-1 595 (600-1)		1740-1¾ 595 (600-1¾) 1880-2¼ 735 (800-2¼)	