


REGIONAL APP CON
118.1 306.95
AFW ATIS
126.925
FTW ATIS
120.7
KNFW ATIS ★
351.675

NOTE: RADAR required.
NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.

SASIE
VERTICAL NAVIGATION
PLANNING INFORMATION
TURBOJETS NORTH FLOW:
Expect 10000
TURBOJETS SOUTH FLOW:
Expect 11000
PROPS:
Expect 5000 or 6000

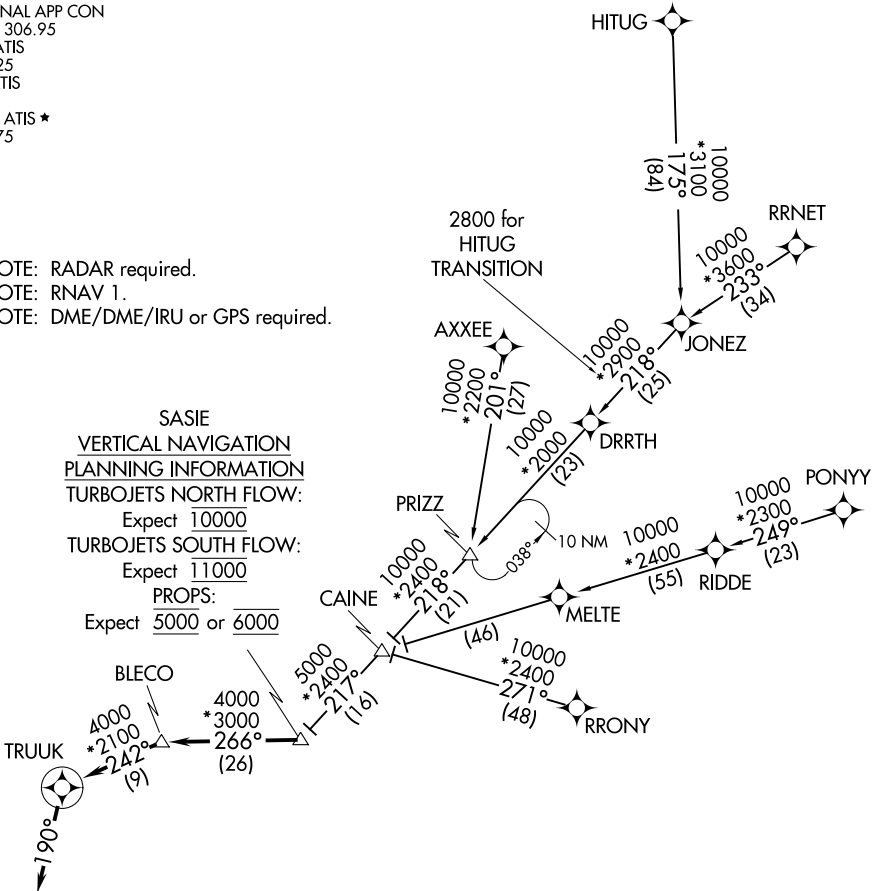

ARRIVAL ROUTE DESCRIPTION

AXXEE TRANSITION (AXXEE.TRUUK2): (For aircraft
filing FL230 and below).
HITUG TRANSITION (HITUG.TRUUK2)
PONY TRANSITION (PONY.TRUUK2)
RRNET TRANSITION (RRNET.TRUUK2)
RRONY TRANSITION (RRONY.TRUUK2): (For aircraft
filing FL230 and below).

From SASIE on track 266° to BLECO, then on track
242° to TRUUK, then on track 190°. Expect RADAR
vectors to final approach course.

NOTE: Chart not to scale.