


VOR/DME SBJ	APP CRS	Rwy Idg	2900
112.9	093°	TDZE	558
Chan 76		Apt Elev	560

VOR RWY 7


SKY MANOR (N40)

DME or RADAR required.	MISSED APPROACH: Climbing left turn to 2500 on SBJ VOR/DME R-273 to EVITT/SBJ 15.5 DME/RADAR and hold.
<p>Procedure NA at night. When local altimeter setting not received, use Lehigh Valley Intl altimeter setting. Rwy 7 helicopter visibility reduction below 1 SM NA.</p>	

AWOS-3 121.725	ALLENTOWN APP CON 119.65 124.45 351.8	UNICOM 122.975 (CTAF)
--------------------------	---	---------------------------------

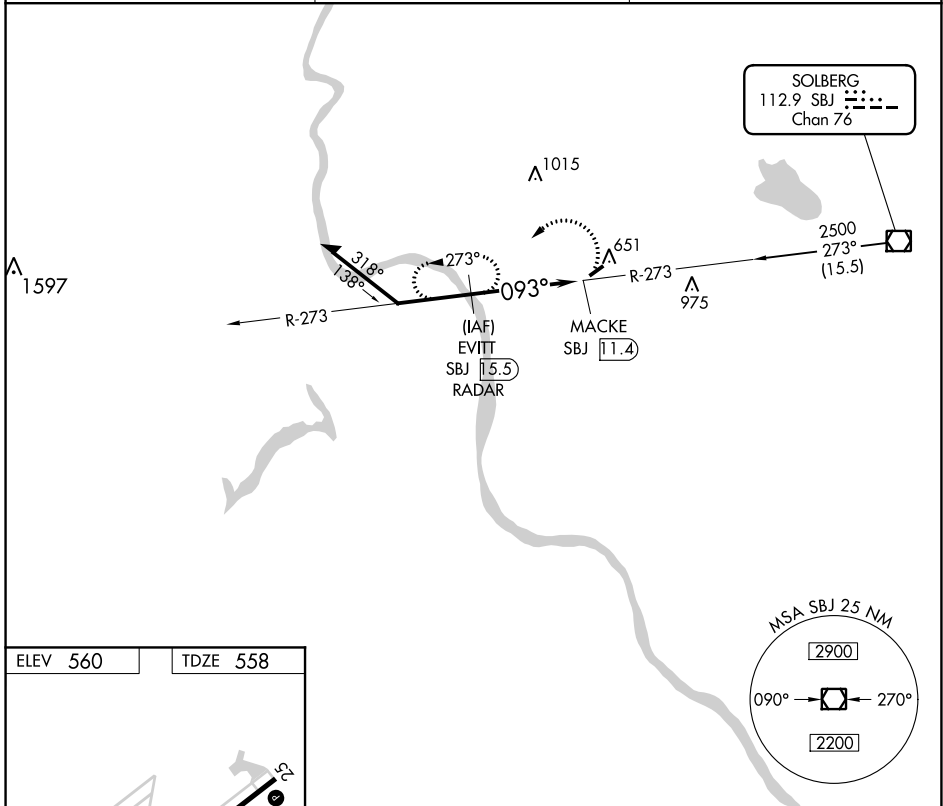


ELEV 560	TDZE 558
----------	----------

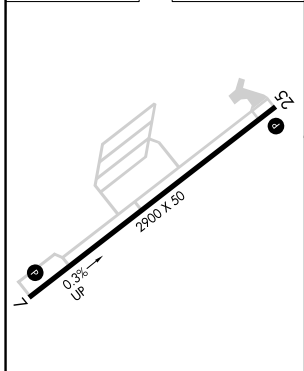

MIRL Rwy 7-25
REIL Rwys 7 and 25

FAF to MAP 4.1 NM

Knots	60	90	120	150	180
Min:Sec	4:06	2:44	2:03	1:38	1:22

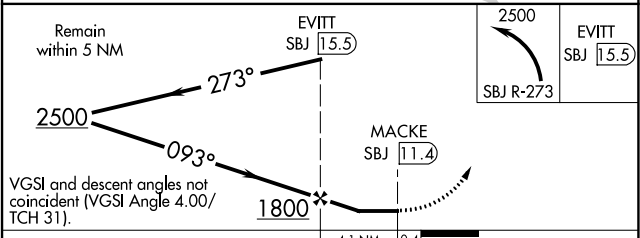

CATEGORY	A	B	C	D
S-7	1220-1 662 (700-1)		NA	
<input checked="" type="checkbox"/> CIRCLING	1220-1 660 (700-1)		NA	