

LOC I-TIW

109.1

APP CRS

167°

Rwy Idg

5002

TDZE

294

Apt Elev

295

ILS or LOC RWY 17

TACOMA NARROWS (TIW)

When control tower closed, obtain local altimeter setting on UNICOM, when not received, use McChord Fld altimeter setting minimums.

MALSR

MISSED APPROACH: Climb to 1500, then climbing right turn to 2000 via heading 290° and SEA VORTAC R-227 to SCENN INT and hold.

ATIS

124.05

SEATTLE APP CON

120.1 290.9

TACOMA TOWER★


118.5 (CTAF) 253.5

GND CON

121.8

UNICOM

122.95

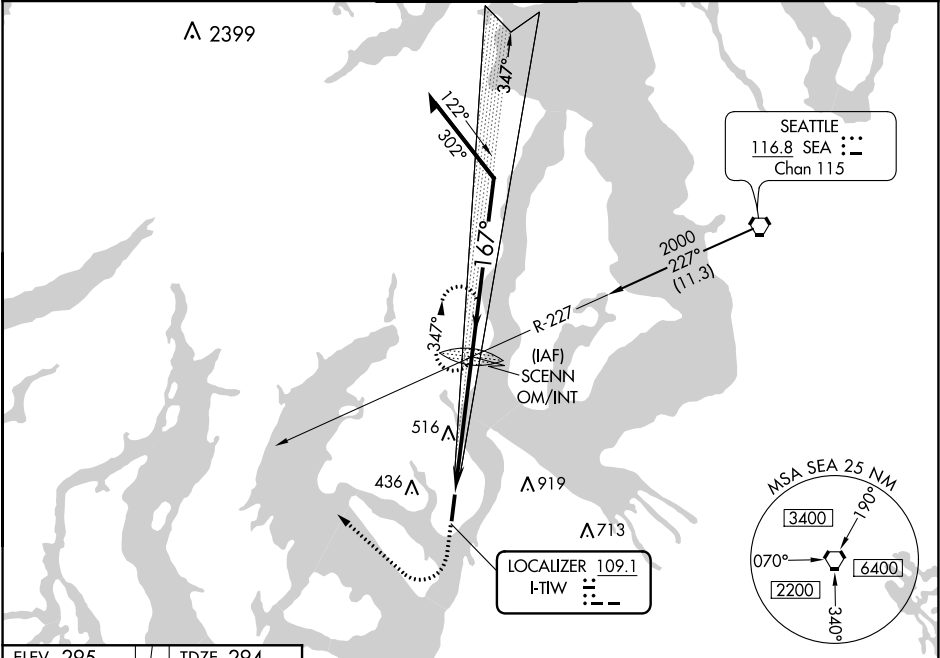

ELEV 295	TDZE 294	1500	2000	SEA R-227	SCENN INT	SCENN OM/INT	Remain within 10 NM
							GS 3.00° TCH 52
FAF to MAP 5 NM							
Knots	60	90	120	150	180		
Min:Sec	5:00	3:20	2:30	2:00	1:40		

CATEGORY	A	B	C	D
S-ILS 17	494-½ 200 (200-½)			
S-LOC 17	760-½	466 (500-½)	760-¾ 466 (500-¾)	760-1 466 (500-1)
CIRCLING	760-1	465 (500-1)	820-1½ 525 (600-1½)	860-2 565 (600-2)
MCCHORD FLD ALTIMETER SETTING MINIMUMS				
S-ILS 17	519-½ 225 (300-½)			
S-LOC 17	780-½	486 (500-½)	780-¾ 486 (500-¾)	780-1 486 (500-1)
CIRCLING	800-1	505 (600-1)	860-1½ 565 (600-1½)	900-2 605 (700-2)