


ATLANTA, GEORGIA

NOTE: RADAR required.
NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.
NOTE: Turbojet aircraft only.
NOTE: Landing west: Select Rwy 26R; Landing east: Select Rwy 8L.
NOTE: Landing Rwy 27L: Select ROMMM approach transition.
NOTE: Landing Rwy 27R: Select MMCAP approach transition.

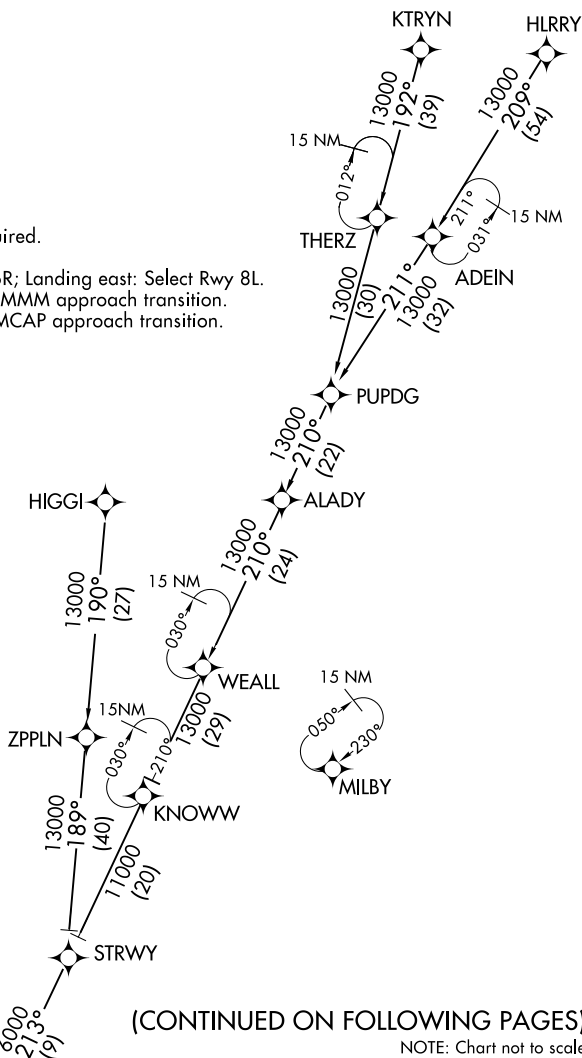

(CONTINUED ON FOLLOWING PAGES)

NOTE: Chart not to scale.

ONDRE
13000
Landing west
Expect 250K

See following page
for Arrival Routes.

HIGGI TRANSITION (HIGGI.ONDRE1):
For TYS departures or assigned by ATC only.
HLRRY TRANSITION (HLRRY.ONDRE1)
KTRYN TRANSITION (KTRYN.ONDRE1)
PUPDG TRANSITION (PUPDG.ONDRE1)
STRWY TRANSITION (STRWY.ONDRE1)