


TOP ALTITUDE:
ASSIGNED BY ATC

- NOTE: RNAV 1.
- NOTE: RADAR required.
- NOTE: DME/DME/IRU or GPS required.
- NOTE: Turbojet departures at/above 10000, maintain 280K until advised by ATC.
- NOTE: For use by aircraft filed at or below FL220, or as assigned by ATC.
- NOTE: CAUTION: Parachute jumping 6 NM SW of BROZZ, 3 NM radius of Napoleon Airport (3NP) at or below 17999 (SR-SS).

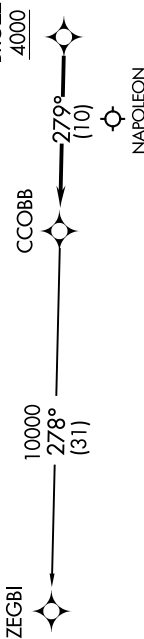

NOTE: Chart not to scale.



DEPARTURE ROUTE DESCRIPTION

- TAKEOFF RUNWAY 1: Climb on heading 007° or as assigned for RADAR vectors to cross BROZZ at or above 4000, thence....
- TAKEOFF RUNWAY 19: Climb on heading 187° or as assigned for RADAR vectors to cross BROZZ at or above 4000, thence....
-on track 279° to CCOBB, then on (transition). Maintain ATC assigned altitude, expect filed altitude 10 minutes after departure.

ZEGBI TRANSITION [CCOBB2.ZEGBI]: