

LOC I-SOU <u>110.1</u>	APP CRS 013°	Rwy Idg 9072 TDZE 1180 Apt Elev 1204
----------------------------------	------------------------	---

ILS or LOC RWY 1
SAWYER INTL (SAW)

DME required for LOC only.


MALSR

MISSED APPROACH: Climb to 1700 then climbing right turn to 3000 on heading 101° and on SAW VOR/DME R-095 to YEXJO INT and hold.

Autopilot coupled approach NA below 1360 MSL.



AWOS-3 118.375	MINNEAPOLIS CENTER 119.1 290.2	SAWYER TOWER ★ 119.975 (CTAF) 0	GND CON 121.65	UNICOM 122.7
--------------------------	--	---	--------------------------	------------------------

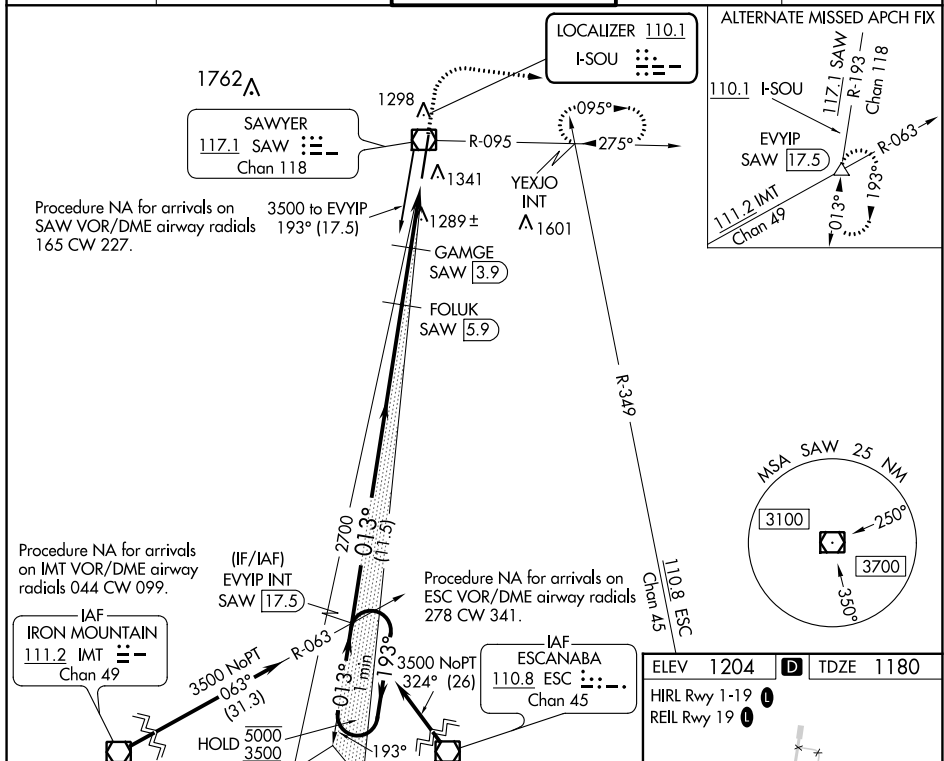

One Minute Holding Pattern EVYIP INT SAW [17.5]

FOLUK SAW [5.9]

GAMGE SAW [3.9]

*SAW [2.3]

*LOC only

GS 3.00° TCH 50

Distances: 11.5 NM, 2 NM, 1.6 NM, 1 NM

