


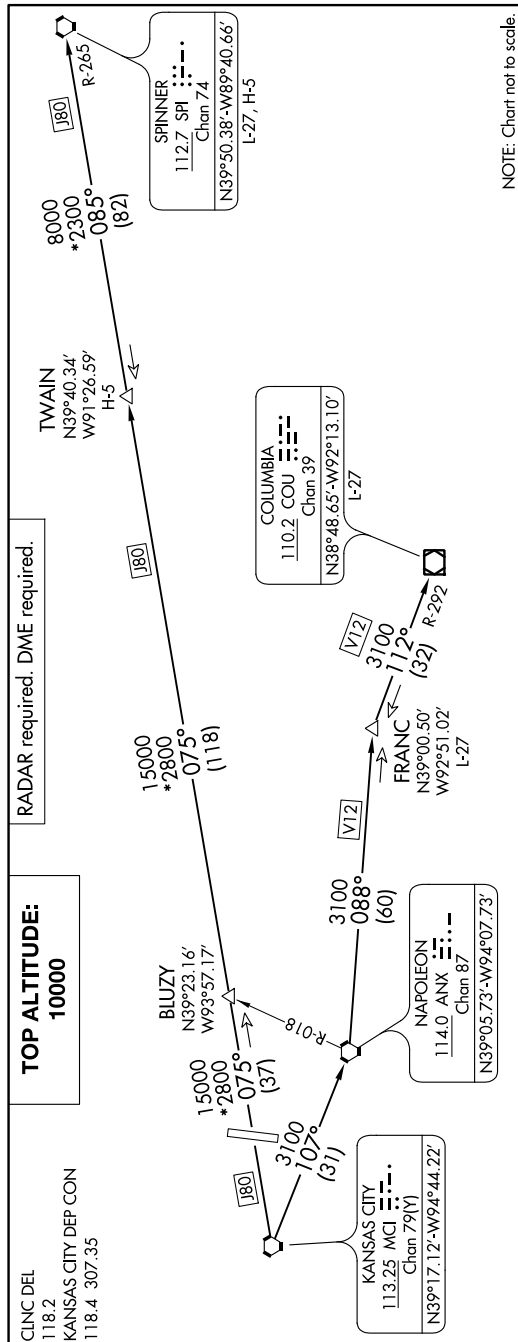

NOTE: Chart not to scale.

DEPARTURE ROUTE DESCRIPTION

TAKEOFF ALL RUNWAYS: Climb on assigned heading for RADAR vectors to appropriate route. Maintain 10000 or as assigned by ATC. Expect filed altitude 10 minutes after departure.

COLUMBIA TRANSITION (LAKES4.COU): From over MCI VORTAC on MCI R-107 to ANX VORTAC, then on ANX R-088 and COU R-292 to COU VOR/DME.

FRANC TRANSITION (LAKES4.FRANC): From over MCI VORTAC on MCI R-107 to ANX VORTAC, then on ANX R-088 to FRANC.

SPINNER TRANSITION (LAKES4.SPI): From over MCI VORTAC on MCI R-075 and SPI R-265 to TWIN, then on SPI R-265 to SPI VORTAC.

TWAIN TRANSITION (LAKES4.TWAIN): From over MCI VORTAC on MCI R-075 and SPI R-265 to TWAIN.

$$Z \leftarrow$$

TAKEOFF MINIMUMS
Rwys 18, 36: Standard.