
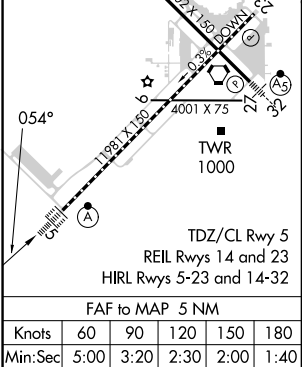



VORTAC FWA	APP CRS	Rwy Idg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

VOR or TACAN RWY 5
FORT WAYNE INTL (FWA)

DME or RADAR required.		ALSIF-2	MISSED APPROACH: Climbing right turn to 3000 on FWA VORTAC R-134 to OSBER INT/FWA 22 DME and hold.
	For inop ALS, increase S-5 Cat C/D/E visibility to 1½ SM.		
ASR			

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

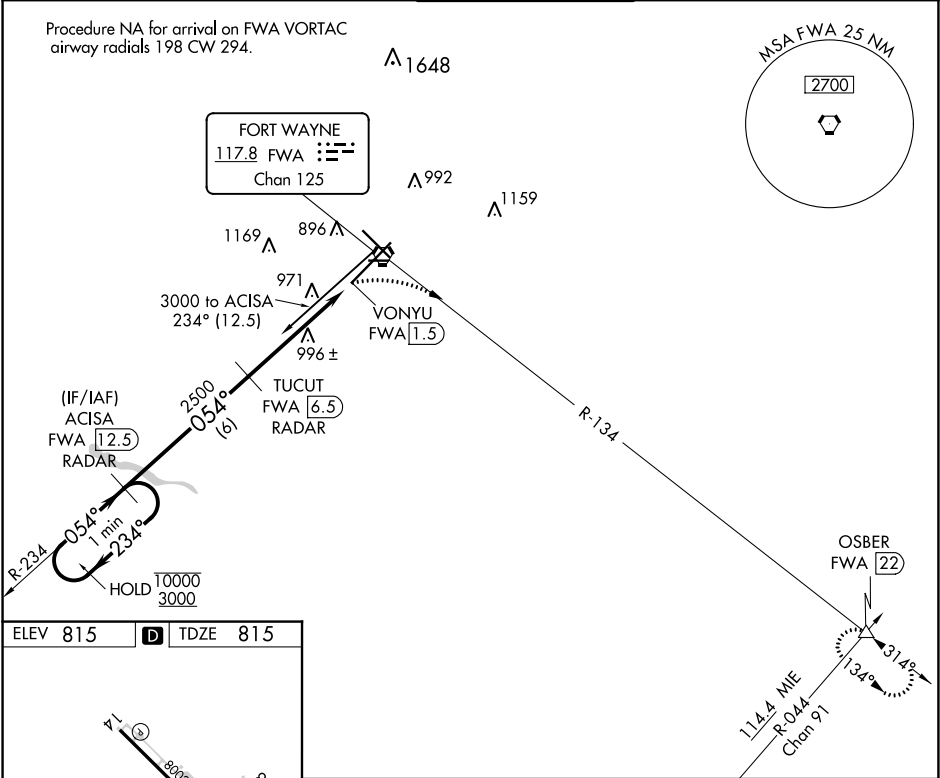

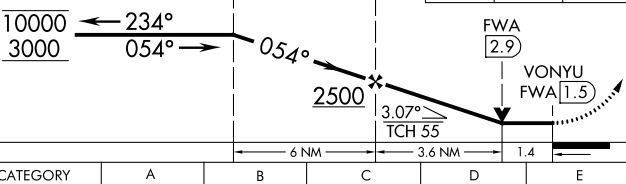One Minute Holding Pattern			ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 	FWA R-134	OSBER 
							
CATEGORY	A	B	C	D	E		
S-5	1320/24	505 (600-½)	1320/55	505 (600-1)	1320/60 505 (600-1½)		
 CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)		

EC-2, 07 SEP 2023 to 05 OCT 2023

EC-2, 07 SEP 2023 to 05 OCT 2023