
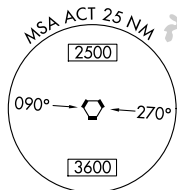


22083

ILS or LOC RWY 17L
TSTC WACO (CNW)

MISSED APPROACH: Climb to 2200 then climbing right turn to 4000 direct ACT VORTAC and hold.
(TACAN aircraft continue on ACT VORTAC R-305 to IGOORR /ACT 14 DME and hold SE. RT. 305° inbound)

UNICOM
122.95

MIRL Rwy 17L-35R 1					
FAF to MAP 5.6 NM					
Knots	60	90	120	150	180
Min:Sec	5:36	3:44	2:48	2:14	1:52

TSTC WACO (CNW)
ILS or LOC RWY 17L