


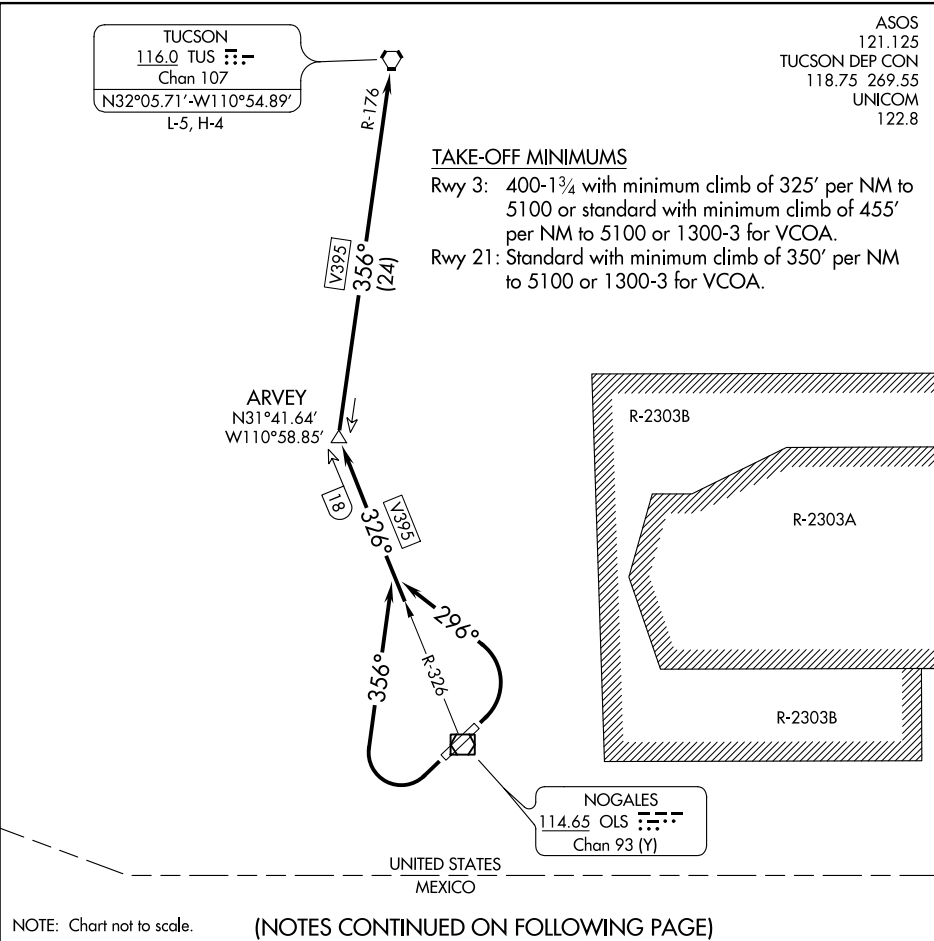

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 3: Climbing left turn heading 296° to intercept OLS VOR/DME R-326 to ARVEY INT/OLS 18 DME, thence. . .

TAKEOFF RUNWAY 21: Climb right turn heading 356° to intercept OLS VOR/DME R-326 to ARVEY INT/OLS 18 DME, thence. . .

VCOA ALL RUNWAYS: Obtain ATC approval for VCOA when requesting IFR clearance. Climb in visual conditions to cross Nogales Intl Airport at or above 6900 before proceeding on OLS R-326 to ARVEY INT/OLS 18 DME, thence. . .

. . . on TUS VORTAC R-176 to cross TUS VORTAC at or above MEA/MCA for assigned route of flight.