

LOC/DME I-BLI
108.5
Chan **22**

APP CRS
164°

Rwy Idg **6700**
TDZE **163**
Apt Elev **171**

ILS or LOC RWY 16


BELLINGHAM INTL (BLI)

DME or RADAR required.

MALSR

MISSED APPROACH: Climb to 700 then climbing right turn to 2000 on heading 275° and on YVR VOR/DME R-135 to TECUV INT/YVR 15.3 DME and hold.

ATIS 134.45	VICTORIA TERMINAL APP CON 132.7 290.8	BELLINGHAM TOWER ★ 124.9 (CTAF) 379.3	GND CON 127.4 379.3	UNICOM 122.95
-----------------------	---	--	-------------------------------	-------------------------

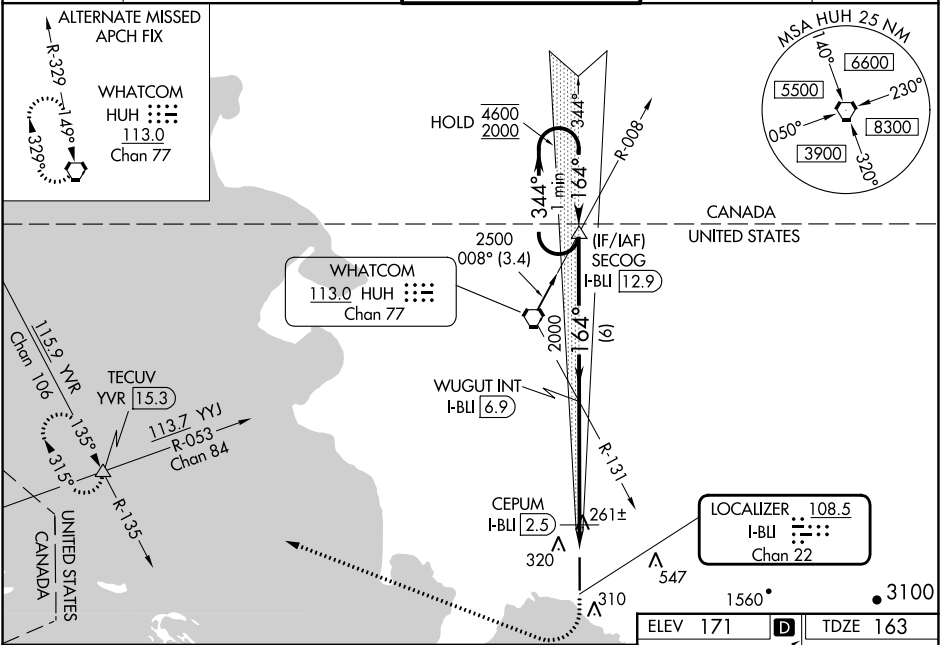

One Minute Holding Pattern		SECOG I-BLI 12.9	WUGUT INT I-BLI 6.9		700 ↑		2000 hdg 275°		YVR R-135	TECUV △
4600 2000		← 344° 164° →		2000	*LOC only		CEPUM I-BLI 2.5 I-BLI 1.3			
GS 3.00° TCH 51		6 NM		4.4 NM		1.2 NM				
CATEGORY	A		B		C		D			
S-ILS 16 #	363/24 200 (200-½)									
S-LOC 16	580/24 417 (500-½)				580/40 417 (500-¾)					
CIRCLING	640-1 469 (500-1)				900-2 729 (800-2)			1160-3 989 (1000-3)		
CEPUM FIX MINIMUMS (DME REQUIRED)										
S-LOC 16	520/24 357 (400-½)				520/30 357 (400-¾)					
CIRCLING	640-1 469 (500-1)				900-2 729 (800-2)			1160-3 989 (1000-3)		

ELEV 171

TDZE 163

REIL Rwy 34

HIRL Rwy 16-34

FAF to MAP 5.6 NM

Knots

Min:Sec

60

5:36

90

3:44

120

2:48

150

2:14

180

1:52