


VORTAC SZW 117.5 Chan 122	APP CRS 353°	Rwy ldg TDZE Apt Elev	7000 62 83
---	------------------------	-----------------------------	---------------------------------------

VOR or TACAN RWY 36

TALLAHASSEE INTL (TLH)


DME required.		MALSR		MISSED APPROACH: Climb to 4000 direct SZW VORTAC and on SZW VORTAC R-288 to QUILL/SZW 11.8 DME and hold, continue climb-in-hold to 4000.	
For inop ALS, increase VOR Cat E visibility to RVR 6000. For inop ALS, increase TACAN Cat E visibility to RVR 6000. ASR					

ATIS 119.45 239.25	TALLAHASSEE APP CON* 135.8 317.4	TALLAHASSEE TOWER* 118.7(CTAF) 257.8	GND CON 121.9 348.6	CLNC DEL 126.65 275.8	UNICOM 123.075
------------------------------	--	--	-------------------------------	---------------------------------	--------------------------

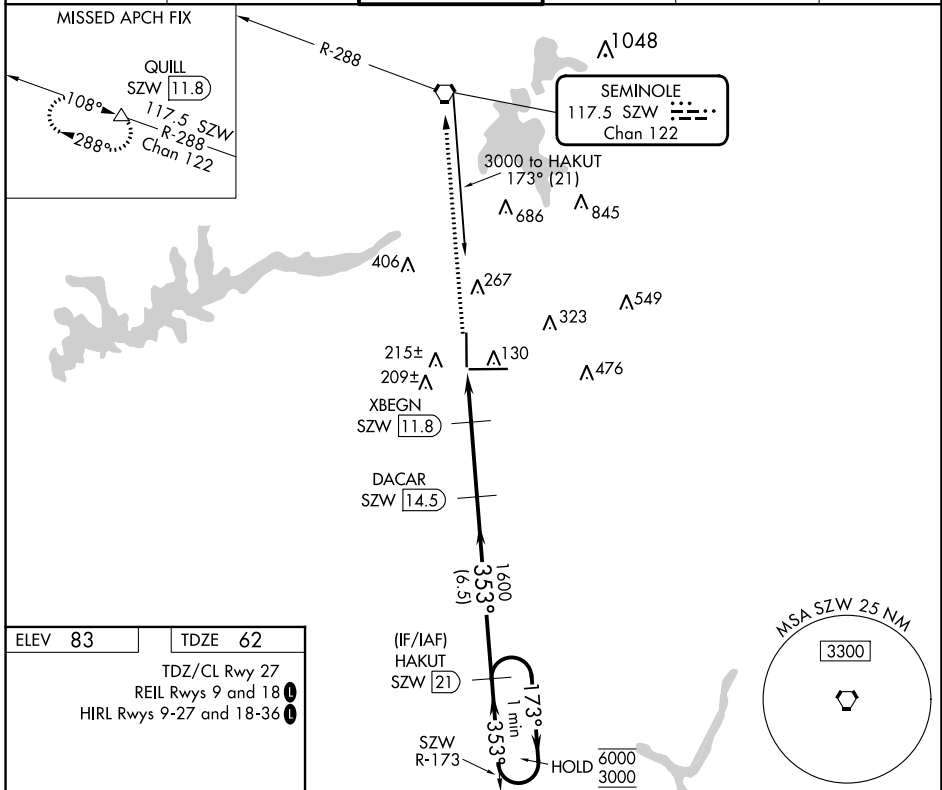


ELEV 83	TDZE 62
---------	---------

TDZ/CL Rwy 27
REIL Rwy 9 and 18
HIRL Rwy 9-27 and 18-36

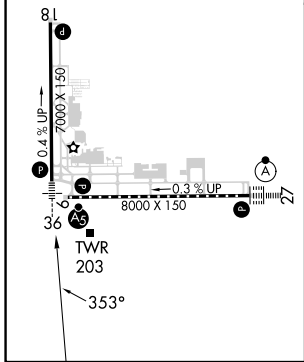

4000	SZW	SZW R-288	QUILL	HAKUT SZW 21	One Minute Holding Pattern
------	-----	-----------	-------	--------------	----------------------------

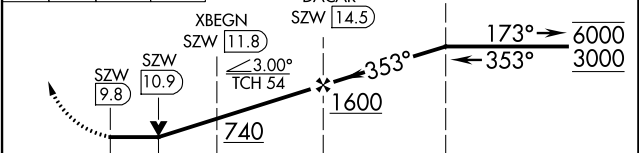

CATEGORY	A	B	C	D	E
S-36	460/24	398 (400-½)	460/35	398 (400-%)	
CIRCLING	580-1 497 (500-1)	600-1 517 (600-1)	640-1½ 557 (600-1½)	800-2¼ 717 (800-2¼)	1000-3 917 (1000-3)