


APP CRS	Rwy Idg	10000
057°	TDZE	1103
	Apt Elev	1159

RNAV (GPS) Y RWY 6

SAN BERNARDINO INTL (SBD)

RNP APCH	MISSED APPROACH: Climb to 2800 then climbing right turn to 6000 direct PDZ VORTAC and hold, continue climb-in-hold to 6000.
Circling NA northwest of Rwy 6-24. When local altimeter setting not received, use Ontario altimeter setting and increase all MDA 80 feet.	

D-ATIS	SOCAL APP CON	SAN BERNARDINO TOWER★	GND CON	UNICOM
124.175	127.0 318.2	119.45 (CTAF) 0	121.8	122.975

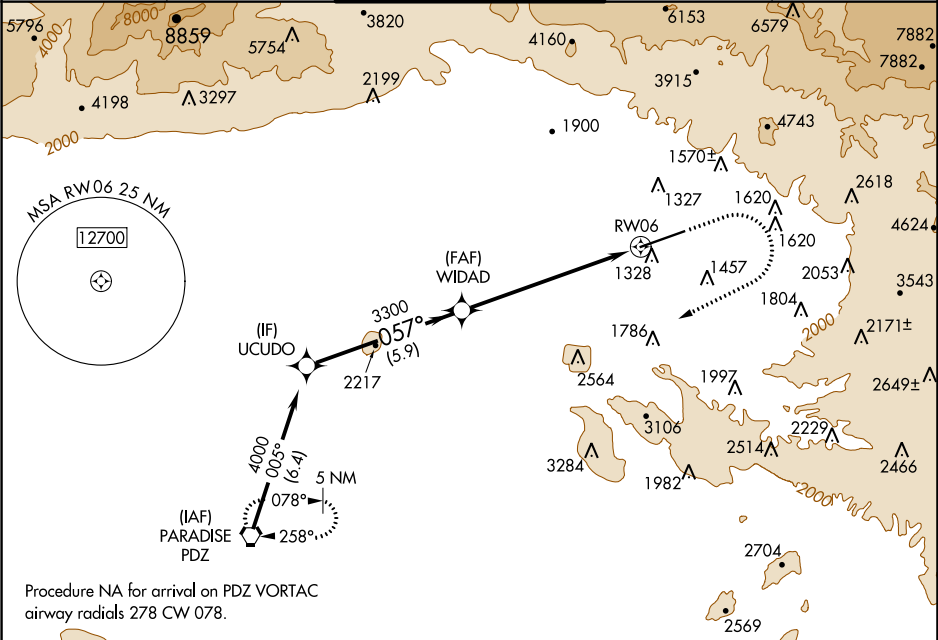

Procedure NA for arrival on PDZ VORTAC
airway radials 278 CW 078.

