

LOC	I-LMJ	APP CRS	Rwy Idg	11001
	110.7	218°	TDZE	964
			Apt Elev	964

ILS or LOC RWY 22

GREENVILLE SPARTANBURG INTL (GSP)



⚠

When local altimeter setting not received, use Greenville Downtown altimeter setting: increase DA to 1193; increase all MDAs 40 feet and visibility S-LOC 22 Cats C and D to RVR 3500 and Circling Cat D ¼ SM. For inop ALS, increase S-LOC 22 Cat C/D visibility to RVR 5500.

MALSR

MISSED APPROACH: Climb to 2000 then climbing left turn to 3000 direct SPA VORTAC and hold.

ATIS	GREER APP CON★	GREER TOWER★	GND CON	CLNC DEL	UNICOM
134.25	118.8 270.275	120.1(CTAF) 251.15	121.9	121.9	122.95

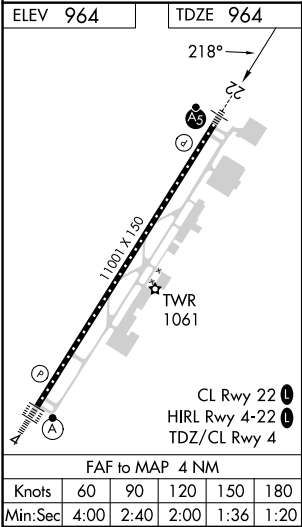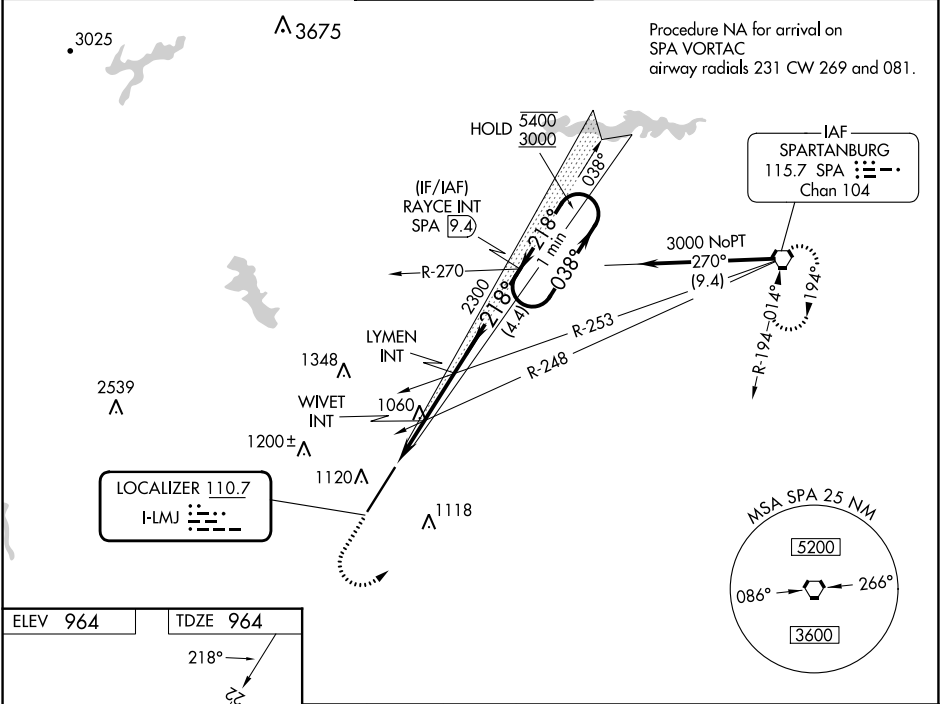

2000	3000	SPA	VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 76).	One Minute Holding Pattern
*LOC only.	LYMEN INT	RAYCE INT SPA 9.4		
WIVET INT	2300	218°	038°	5400
	1660*	2300	← 218°	3000
	2 NM	2 NM	4.4 NM	GS 3.00° TCH 61
CATEGORY	A	B	C	D
S-ILS 22	1164/24 200 (200-½)			
S-LOC 22	1320/24	356 (400-½)	1320/30	356 (400-¾)
✒ CIRCLING	1440-1	476 (500-1)	1480-1½ 516 (600-1½)	1700-2¼ 736 (800-2¼)