


VOR/DME VCN 115.2 Chan 99	APP CRS 013°	Rwy Idg TDZE Apt Elev N/A N/A 150	VOR-B PINE VALLEY (19N)
---	------------------------	---	-----------------------------------

▼ Procedure NA at night. Visibility reduction by helicopters NA. Use Mount Holly altimeter setting, when not received, use Philadelphia Intl altimeter setting and increase MDA 20 feet. ▲ NA	MISSED APPROACH: Climbing right turn to 2100 direct VCN VOR/DME and hold.
---	---

MC GUIRE APP CON 126.475 363.8	UNICOM 123.0 (CTAF) 0
--	--

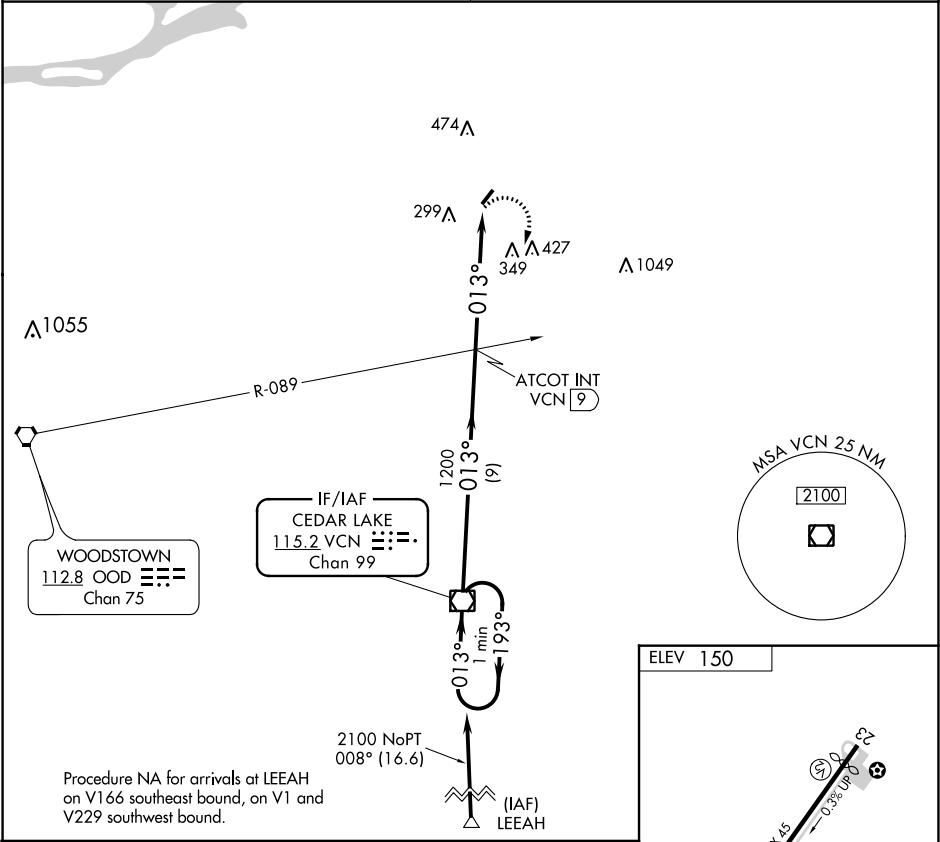

One Minute Holding Pattern		VCN VOR/DME		2100	VCN
2100 ← 193°		013° →		ATCOT INT VCN 9	VCN 14.3
1200		013°		9 NM	5.3 NM
CATEGORY	A	B	C	D	FAF to MAP 5.3 NM
CIRCLING	900-1 750 (800-1)	NA			Knots 60 90 120 150 180 Min:Sec 5:18 3:32 2:39 2:07 1:46