


LOC/DME I-FQV	APP CRS	Rwy Idg	11759
109.7	352°	TDZE	177
Chan 34		Apt Elev	234

ILS or LOC RWY 35

PLATTSBURGH INTL (PBG)

DME required. RNAV 1-GPS required.	MALSR	MISSED APPROACH: Climb to 700 then climbing right turn to 3000 direct JUTEK and hold.
For inop ALS, increase S-LOC 35 Cat C/D visibility to 1 SM.		

ASOS 132.225	BURLINGTON APP CON * 121.1 278.8	CLNC DEL 121.85	UNICOM 122.7 (CTAF)
-----------------	-------------------------------------	--------------------	------------------------

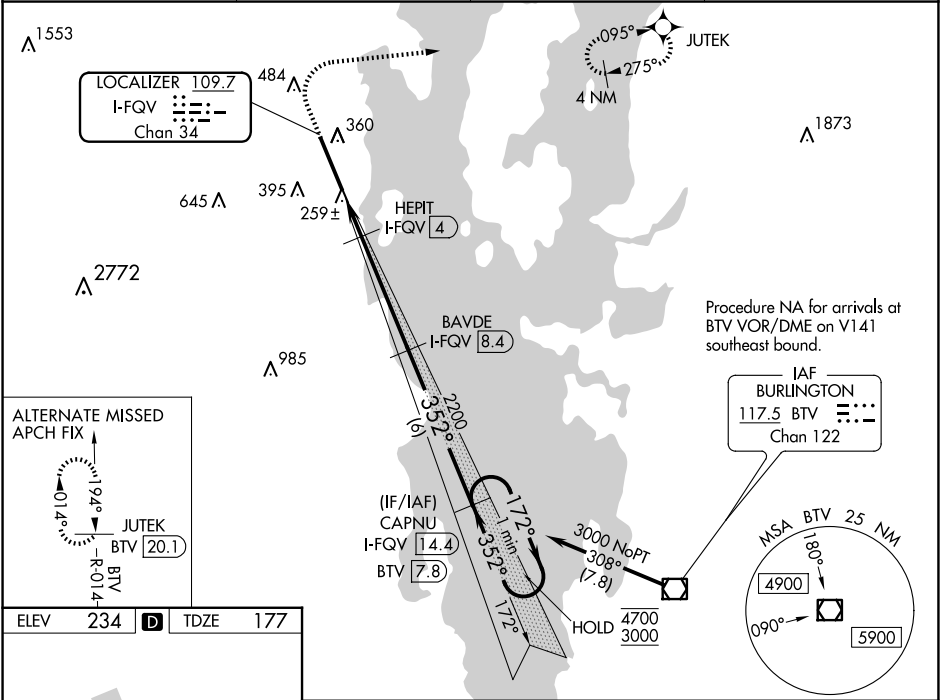

ELEV 234 TDZE 177				One Minute Holding Pattern	
*LOC only		BAVDE I-FQV 8.4		CAPNU I-FQV 14.4	
2.1		3.1		4	
1 NM		0.9 NM		4.4 NM	
CATEGORY		A		B	
S-ILS 35		377-1/2		200 (200-1/2)	
S-LOC 35		520-1/2		343 (300-1/2)	
		720-1		740-1	
		486 (500-1)		506 (600-1)	
		800-1 1/2		566 (600-1 1/2)	
		960-2 1/4		726 (800-2 1/4)	