
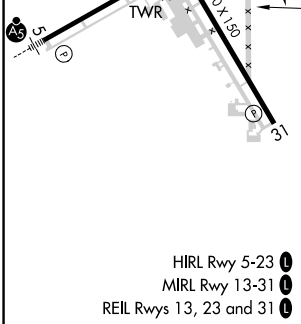


VOR/DME OTH <b>113.85</b> Chan <b>85(Y)</b>	APP CRS <b>257°</b>	Rwy Idg TDZE Apt Elev <b>17</b>	<b>N/A</b> <b>N/A</b> <b>17</b>
---	------------------------	--	---------------------------------------

**VOR-B**  
SOUTHWEST OREGON RGNL (OTH)

DME required.	MISSED APPROACH: Climb to 2300 then climbing right turn to 3600 direct OTH VOR/DME and hold.
<p><b>▼</b> Circling Rwy 13, 31 NA at night. <b>▲</b> Rwy 13, 31 helicopter visibility reduction below 1 SM NA.</p>	

AWOS-3PT <b>135.075</b>	SEATTLE CENTER <b>127.55 254.35</b>	NORTH BEND TOWER* <b>118.45 (CTAF) 0</b>	GND CON <b>127.1</b>
----------------------------	--	---	-------------------------

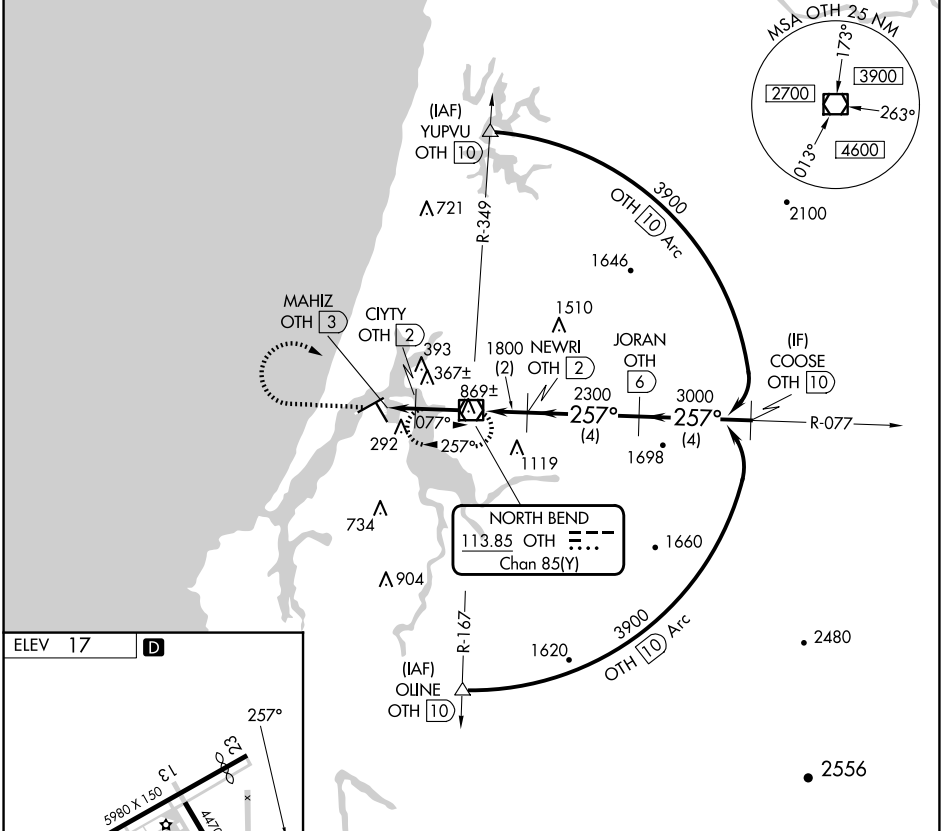

	2300	3600	OTH						
	↑	↷							
			OTH VOR/DME	NEWRI OTH 2	JORAN OTH 6				COOSE OTH 10
									3900
									3000
									2300
									1800
									1060
	1 NM	2 NM	2 NM	4 NM	4 NM				
CATEGORY	A	B	C	D					
<b>CIRCLING</b>	700-1 683 (700-1)	820-1 803 (900-1)	1100-3 1083 (1100-3)	1180-3 1163 (1200-3)					