
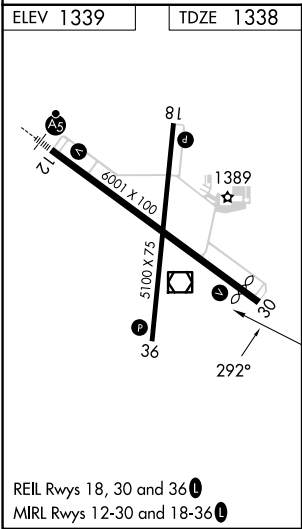


VOR/DME SPW 115.15 Chan 98(Y)	APP CRS 292°	Rwy Idg TDZE Apt Elev	5511 1338 1339
---	------------------------	-----------------------------	---

VOR RWY 30
SPENCER MUNI (SPW)

DME required.	MISSED APPROACH: Climb to 3000, then left turn direct SPW VOR/DME, then on SPW VOR/DME R-112 to ZUNMU/SPW 5.3 DME and hold.
VDP NA when using Estherville altimeter setting. When local altimeter setting not received, use Estherville altimeter setting and increase all MDA 60 feet and increase S-30 Cat C/D visibility ½ SM and Circling Cat C/D visibility ¼ SM.	

ASOS 126.625	MINNEAPOLIS CENTER 127.75 257.7	UNICOM 123.0 (CTAF) 0
------------------------	---	---------------------------------

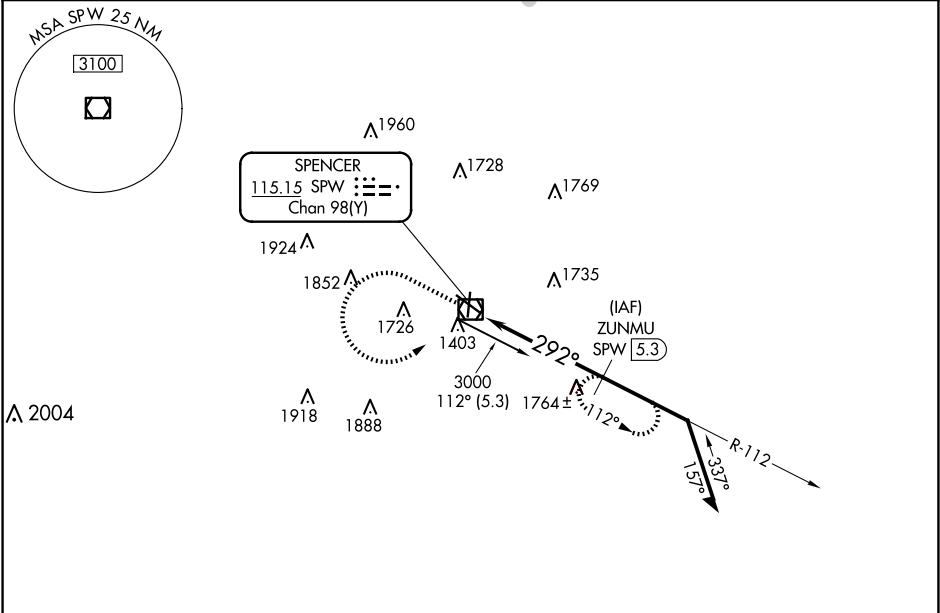

3000				SPW R-112	ZUNMU SPW 5.3	ZUNMU SPW 5.3	Remain within 10 NM
					SPW 2.4	≤ 3.01° TCH 40	112°
					292°	3000	3000
					VGSI and descent angles not coincident (VGSI Angle 3.00/TCH 26).		
					2.2 NM	2.9 NM	
CATEGORY	A		B		C	D	
S-30	2080-1 742 (800-1)		2080-1¼ 742 (800-1¼)		2080-2	742 (800-2)	
 CIRCLING	2080-1 741 (800-1)		2080-1¼ 741 (800-1¼)		2100-2¼ 761 (800-2¼)	2100-2½ 761 (800-2½)	