


▼

▲ NA

Baro-VNAV NA. DME/DME RNP-0.3 NA. Use Gadsden altimeter setting, when not received, use Anniston altimeter setting and increase all DA/MDA 20 feet.

MISSED APPROACH: Climb to 1500 then climbing right turn to 3600 direct WEBIL and hold.

GAD AWOS-3PT 127.825	ATLANTA CENTER 124.5 270.325	CTAF 122.90
-------------------------	---------------------------------	----------------

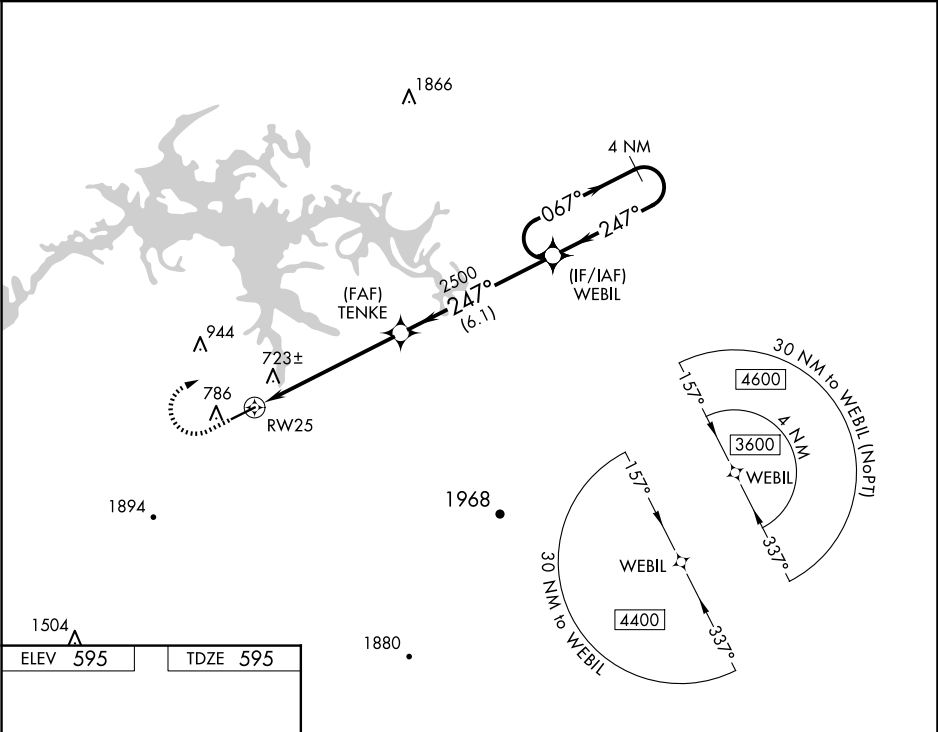

ELEV 595

TDZE 595

1500

3600

WEBIL

247°

25

5500 X 100

TENKE

2500

247°

2500

WEBIL

4 NM Holding Pattern

067°

3600

247°

GP 3.00°

TCH 40

5.9 NM

6.1 NM

CATEGORY	A	B	C	D
LPV DA	856-7 ⁸ / ₈	261 (300-7 ⁸ / ₈)		
LNAV/VNAV DA	1064-1 ⁵ / ₈	469 (500-1 ⁵ / ₈)		
LNAV MDA	1180-1 585 (600-1)	1180-1 ³ / ₄ 585 (600-1 ³ / ₄)		
CIRCLING	1180-1 585 (600-1)	1360-2 ¹ / ₄ 765 (800-2 ¹ / ₄)	2260-3 1665 (1700-3)	

MIRL Rwy 7-250