

ILS or LOC RWY 36
ST PETE-CLEARWATER INTL (PIE)

MISSED APPROACH: Climb to 600 then climbing left turn to 2000 on PIE VORTAC R-276 to LAFAL INT/PIE 8 DME and hold.

LAFA INT
PIE [8]
209
R-276
221
2000 to SONES
178° (6.6)
215±
SAWGA
I-CWT [3.8]
649
CURUG
SRQ [23.3]
P-339
117.0 SRQ
Chan 117
ELEV 11
TDZE 10

LOCALIZER 108.7
I-CWT
Chan 24

ST PETERSBURG
116.4
PIE
Chan 111

IAF SARASOTA
117.0 SRQ
Chan 117

MSA PIE 25 NM
2700

IAF SARASOTA
117.0 SRQ
Chan 117

847 A

ELEV 11 TDZE 10


81

TDZ/CL Rwy 18 L

HRL Rwy 18-36 L

MIRL Rwy 4-22 L

REIL Rwy 4 and 22

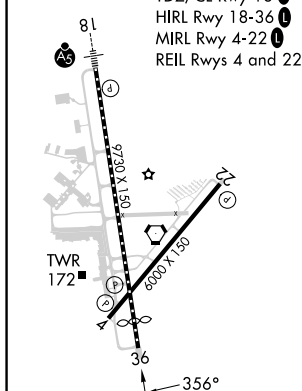

FAF to MAP 6.1 NM

Knots	60	90	120	150	180
Min:Sec	6:06	4:04	3:03	2:26	2:02

ST PETE-CLEARWATER INTL (PIE)
ILS or LOC RWY 36