


WAAS CH 70340 W36A	APP CRS 358°	Rwy Idg TDZE Apt Elev	5001 617 622
--	------------------------	-----------------------------	---

RNAV (GPS) RWY 36
MID-AMERICA INDUSTRIAL (H71)

RNP APCH - GPS.	MISSED APPROACH: Climb to 3800 direct ROBDE and hold, continue climb-in-hold to 3800.
	

AWOS 3-PT 120.1	TUL ASOS 124.9 377.2	TULSA APP CON 119.1 360.825	UNICOM 122.8 (CTAF) ①
---------------------------	--------------------------------	---------------------------------------	---------------------------------

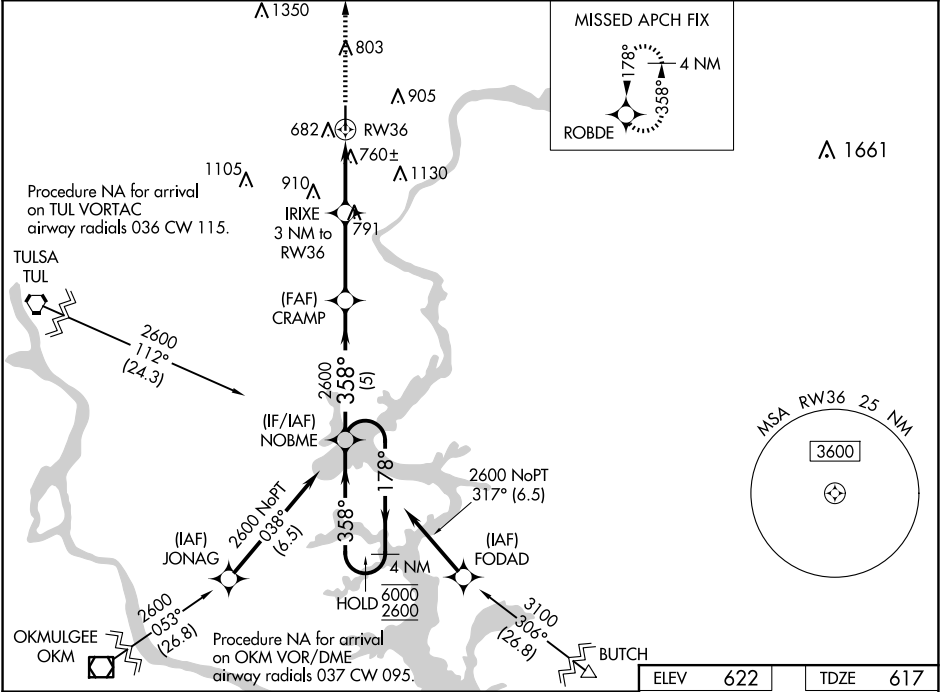

4 NM
Holding Pattern

NOBME

CRAMP

IRIXE
3 NM to
RW36

6000

2600

178°

358°

358°

2600

GP 3.00°

TCH 40

5 NM

3.1 NM

3 NM

1600

RW36

3800

ROBDE

8 l

5001 X 72

0.4% UP

36

358° to RW36

CATEGORY	A	B	C	D
LPV DA	938-1½ 321 (400-1½)			
LNAV/VNAV DA	1131-1½ 514 (600-1½)			
LNAV MDA	1100-1	483 (500-1)	1100-1½ 483 (500-1½)	
CIRCLING	1200-1	578 (600-1)	1560-2¾ 938 (1000-2¾)	1560-3 938 (1000-3)

REIL Rwy 18 and 36

MIRL Rwy 18-36