


LOC/DME I-CWA 110.3 Chan 40	APP CRS 077°	Rwy Idg TDZE Apt Elev	7723 1274 1277
---	------------------------	-----------------------------	---


ILS or LOC RWY 8

CENTRAL WISCONSIN (CWA)

DME required. RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 3000 direct ASARE and hold.	
For inop ALS, increase S-LOC 8 Cat C and D visibility to 1 SM.				
ATIS 127.45	MINNEAPOLIS CENTER 124.4 317.7	CWA TOWER ★ 119.75 (CTAF) 0 360.7	GND CON 121.9 360.7	UNICOM 122.95

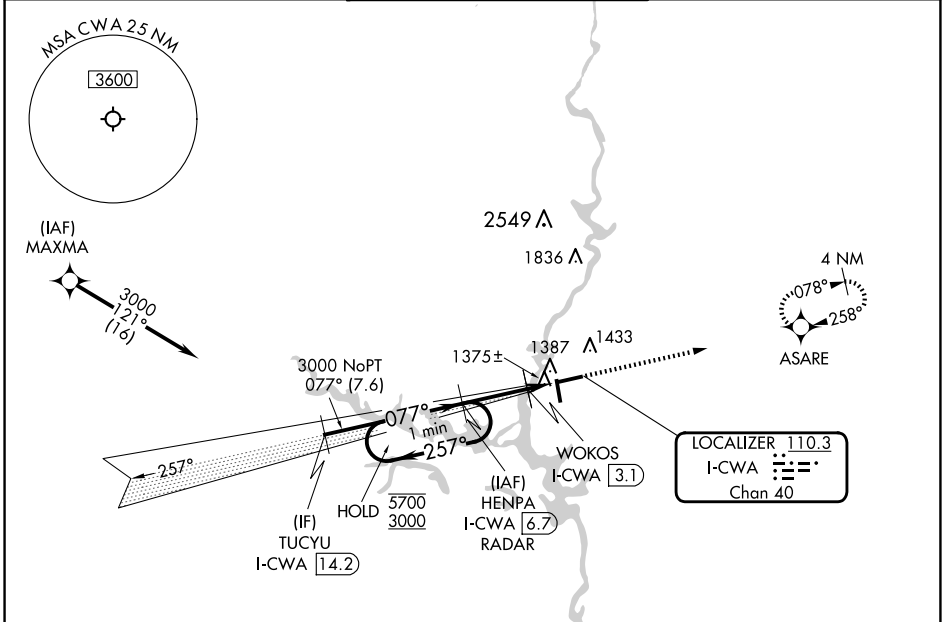

ELEV 1277	D	TDZE 1274
-----------	----------	-----------

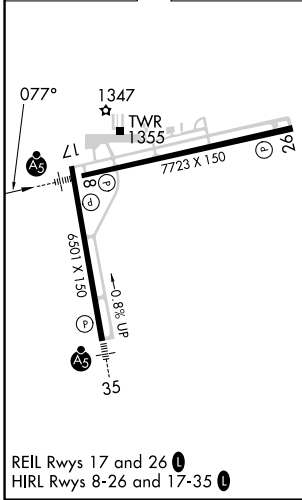

One Minute Holding Pattern	HENPA I-CWA [6.7] RADAR	3000	ASARE	
5700	3000	WOKOS I-CWA [3.1]	I-CWA [2.4]	
3000	3000	1860	I-CWA [1.4]	
GS 3.00° TCH 55	3000	1860	I-CWA [1.4]	
	3.6 NM	0.7 NM	1 NM	
CATEGORY	A	B	C	D
S-ILS 8	1474-½ 200 (200-½)			
S-LOC 8	1640-½ 366 (400-½)	1640-⅝ 366 (400-⅝)		
CIRCLING	1740-1 463 (500-1)	1740-1½ 463 (500-1½)	1840-2 563 (600-2)	

EC-3, 20 MAR 2025 to 17 APR 2025

EC-3, 20 MAR 2025 to 17 APR 2025