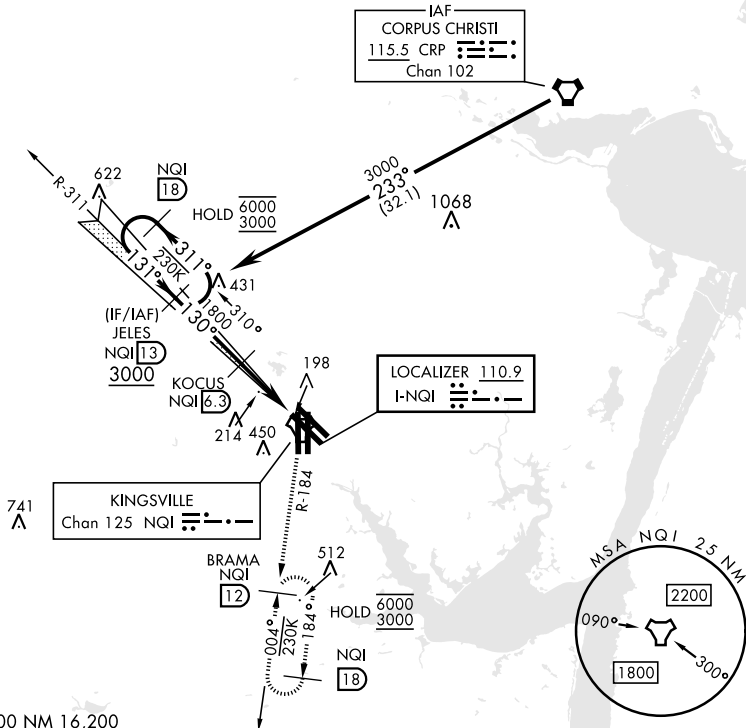


[USN]


KINGSVILLE NAS (KNQI)

TACAN required

MISSED APPROACH: Climb to 500 then climbing right turn to 3000 to intercept NQI TACAN R-184 to BRAMA and hold.

686

EMERG SAFE ALT 100 NM 16,200

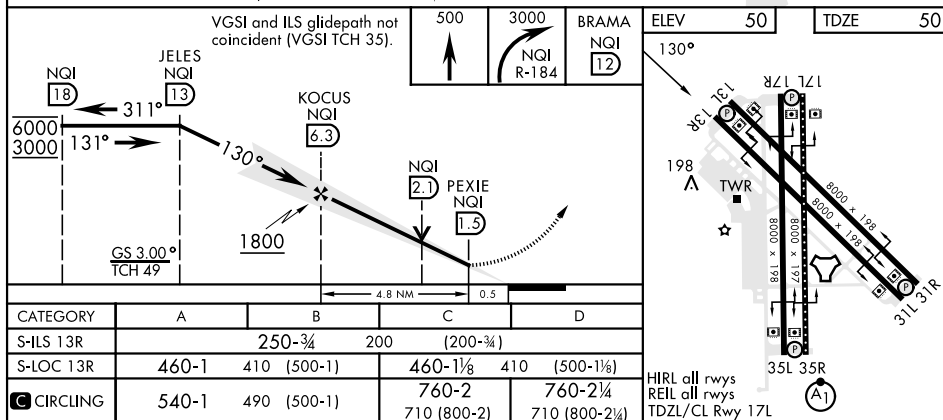

27°30'N-97°49'W

KINGSVILLE NAS (KNQI)

Orig 26DEC24

ILS X or LOC X RWY 13R