



LOC/DME I-UVM	APP CRS	Rwy Idg	5002
111.3	305°	TDZE	925
Chan 50		Apt Elev	941

LOC RWY 31

BLUE RIDGE (MTV)

ADF or DME required for procedure entry. ADF required.	ODALS	MISSED APPROACH: Climbing right turn to 2800 direct BALES LOM/I-UVM 6 DME and hold, continue climb in hold to 2800.
Rwy 31 helicopter visibility reduction below 3/4 SM NA. For inop ALS while using HOMGU fix minimums, increase Cat C/D visibility to 1 1/2 SM.		
-17°C		

AWOS-3	GREENSBORO APP CON	CLNC DEL	UNICOM
118.45	124.35 269.225	124.85	122.7 (CTAF) 0

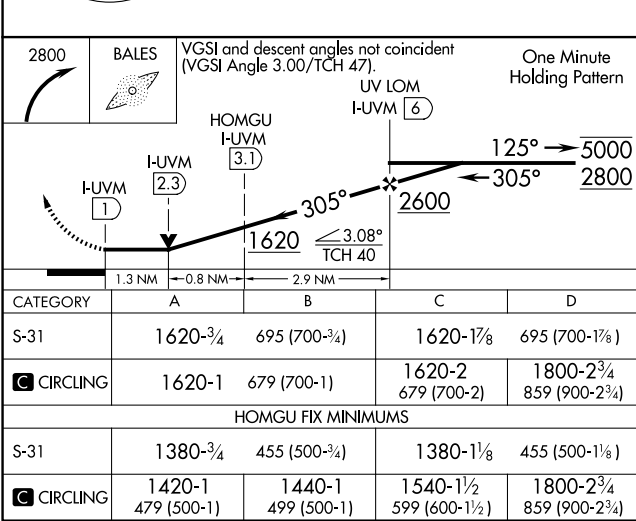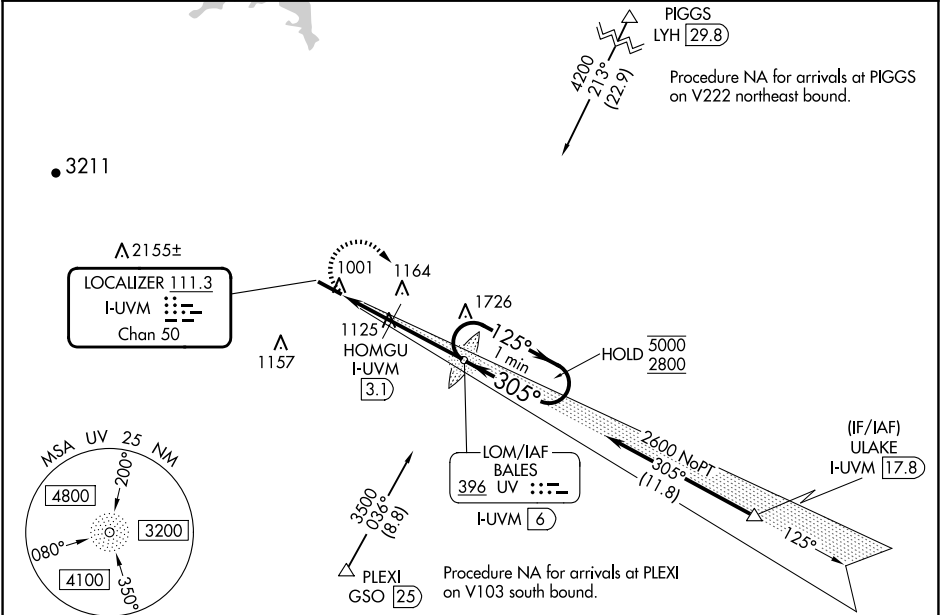

ELEV 941	TDZE 925
One Minute Holding Pattern	
MIRL Rwy 13-31 0	
REIL Rwy 13 and 31 0	
FAF to MAP 5 NM	
Knots	60 90 120 150 180
Min:Sec	5:00 3:20 2:30 2:00 1:40