
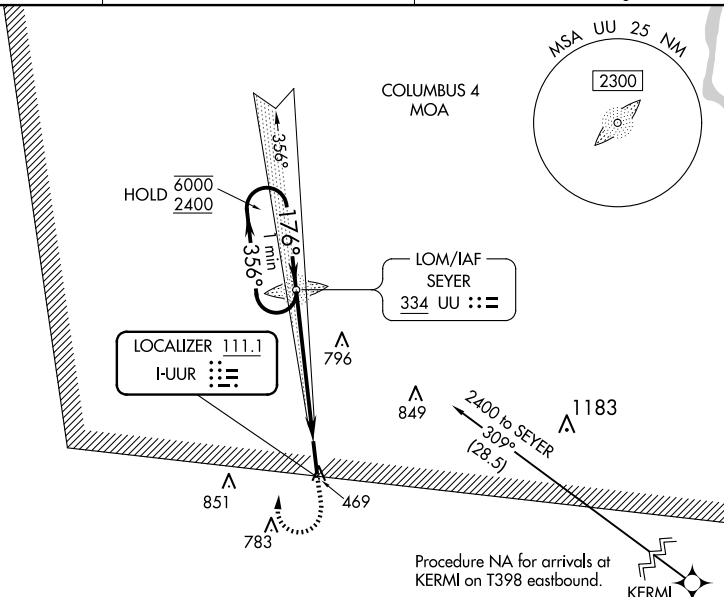
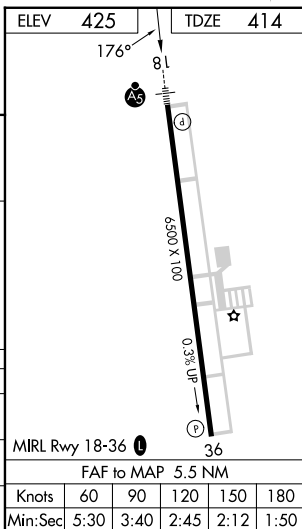


ILS or LOC RWY 18
 ROSCOE TURNER (CRX)

MISSED APPROACH: Climb to 1000 then climbing right turn to 2400 direct UU LOM and hold, continue climb-in-hold to 2400.

UNICOM
122.8 (CTAF) **L**

Procedure NA for arrivals at
KERMI on T398 eastbound.

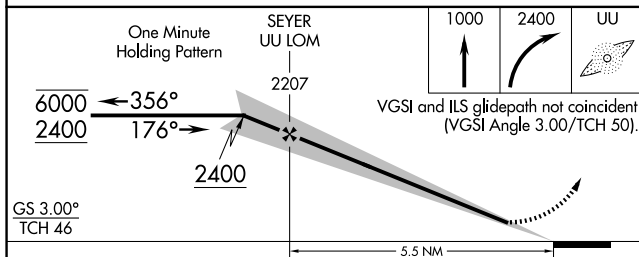

CATEGORY	A	B	C	D
S-ILS 18	614-1/2 200 (200-1/2)			
S-LOC 18	1020-1/2 606 (600-1/2)		1020-13/8 606 (600-13/8)	
 CIRCLING	1020-1 595 (600-1)		1100-2 675 (700-2)	1160-2 1/4 735 (800-2 1/4)

ILS or LOC RWY 18