

LOC/DME I-TWJ
111.95
Chan **56** (Y)

APP CRS
007°


Rwy Idg
TDZE **21**
Apt Elev **26**

LOC RWY 1R
TAMPA INTL (TPA)

DME required.

MISSED APPROACH: Climb to 500 then climbing right turn to 2000 direct LAL VORTAC and hold.

ARR	D-ATIS	DEP	TAMPA APP CON	TAMPA TOWER	GND CON	CLNC DEL	CPDLC
126.45	128.475		118.5 307.175	119.5 269.4	121.7 269.4	133.6	

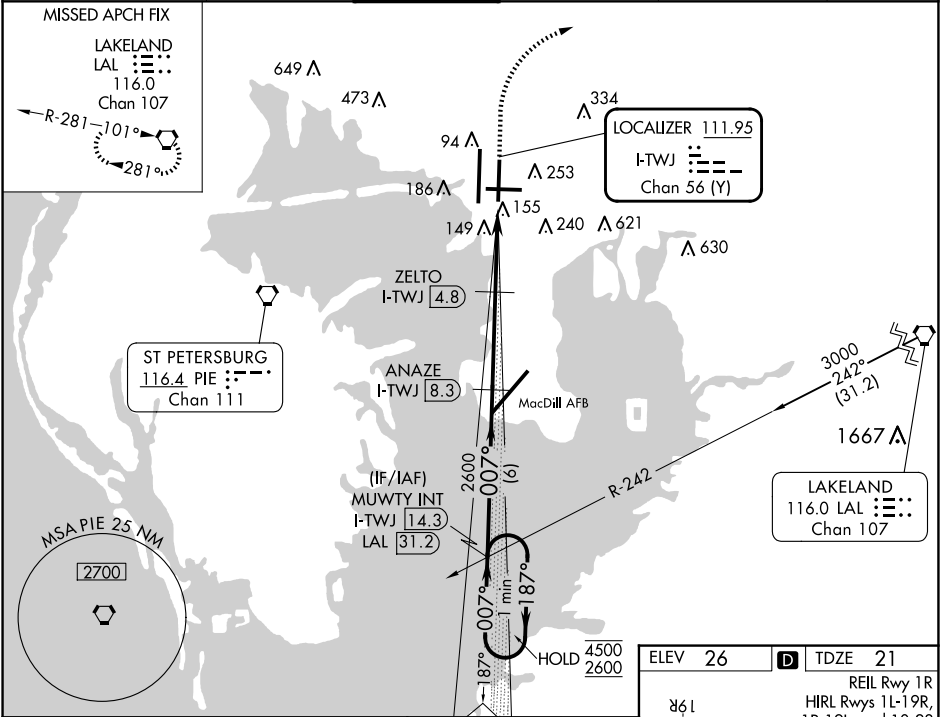

VGSI and descent angle not coincident (VGSI Angle 3.00/TCH 71).

One Minute Holding Pattern

500 2000 LAL

