


APP CRS	Rwy Idg	4000
163°	TDZE	746
	Apt Elev	746

RNAV (GPS) RWY 16

SHERMAN MUNI (SWI)

RNP APCH	Use Sherman/Denison altimeter setting, if not received use Dallas Love Fld altimeter setting and increase all MDA 140 feet and increase LNAV visibility Cat B ¼ SM, Cat C ½ SM, and increase Circling visibility Cats A/B ¼ SM, Cat C ½ SM. Procedure NA at night. Rwy 16 helicopter visibility reduction below 1 SM NA.	MISSED APPROACH: Climbing left turn to 3000 direct URH DME and hold.
----------	---	---

FORT WORTH CENTER 124.75 323.0	UNICOM 122.8 (CTAF) 0
-----------------------------------	--------------------------

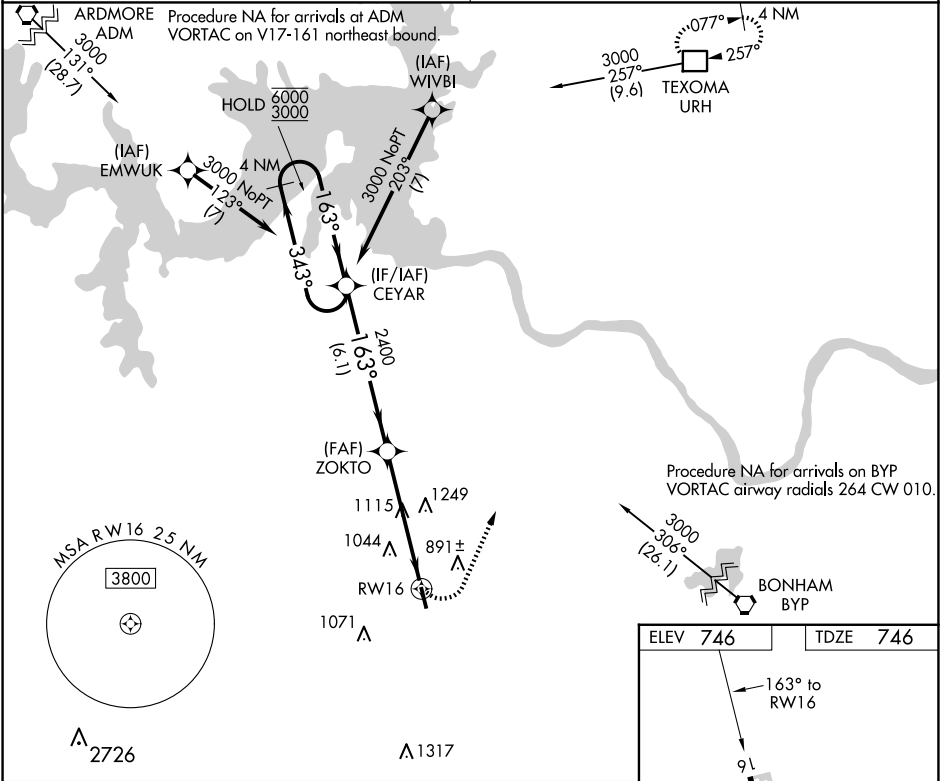

4 NM

Holding Pattern

CEYAR

3000

URH

6000

3000

← 343°

→ 163°

ZOKTO

3.00°

TCH 45

2400

RW16

6.1 NM

5.1 NM

CATEGORY	A	B	C	D
LNAV MDA	1440-1	694 (700-1)	1440-2 694 (700-2)	NA
C CIRCLING	1440-1	694 (700-1)	1620-2½ 874 (900-2½)	NA

ELEV 746 TDZE 746

163° to RW16

91

4000 x 7.5

0.9% UP

34

MIRL Rwy 16-34 0