

VOR/DME GEE	APP CRS	Rwy Idg	N/A
108.2	085°	TDZE	N/A
Chan 19		Apt Elev	814

VOR-A


CANANDAIGUA (IUA)

DME or RADAR required.

When local altimeter setting not received, use Rochester altimeter setting and increase all MDAs 100 feet and Circling visibility all Cals ¼ SM, increase WIVRI Fix Circling minimums visibility Cat C ½ SM.

MISSED APPROACH: Climb to 2000 then climbing right turn to 3500 direct GEE VOR/DME and hold.

AWOS-3P	ROCHESTER APP CON	UNICOM
118.675	119.55 269.6	122.8 (CTAF) 0

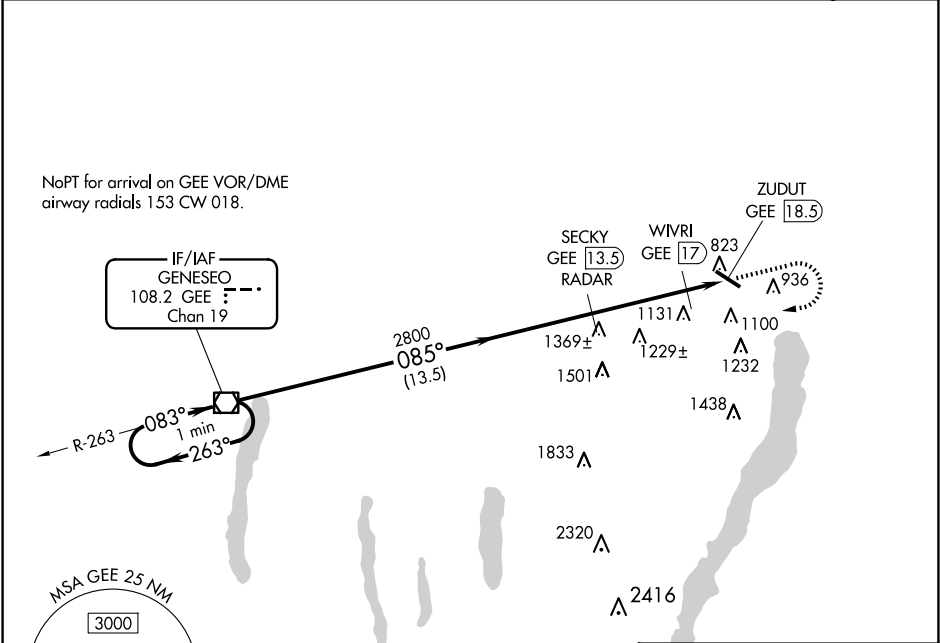

One Minute Holding Pattern

GEE VOR/DME

SECKY GEE 13.5 RADAR

WIVRI GEE 17

ZUDUT GEE 18.5

2000

3500

GEE

3000

263°

083°

085°

2800

1580

13.5 NM

3.5 NM

1.5 NM

ELEV 814

0.4% UP

5500 X 100

085°

CATEGORY	A	B	C	D
CIRCLING	1580-1	766 (800-1)	1580-2 ¼ 766 (800-2 ¼)	NA
WIVRI FIX MINIMUMS				
CIRCLING	1500-1	686 (700-1)	1540-2 726 (800-2)	NA

MIRL Rwy 13-31

REIL Rws 13 and 31

FAF to MAP 5 NM

Knots	60	90	120	150	180
Min:Sec	5:00	3:20	2:30	2:00	1:40