


VORTAC PIA	APP CRS	Rwy Idg	N/A
115.2	151°	TDZE	N/A
Chan 99		Apt Elev	530

VOR-A
PEKIN MUNI (C15)

DME or ADF required.	MISSED APPROACH: Climbing right turn to 2100 direct PIA VORTAC and hold.
▼ Use General Downring - Peoria Intl altimeter setting; when not received use Lincoln ▲ NA altimeter setting and increase all MDAs 40 feet and visibility Cat C ¼ SM.	

SAINT LOUIS APP CON 125.8 269.2	UNICOM 122.8 (CTAF) 0
---	---------------------------------

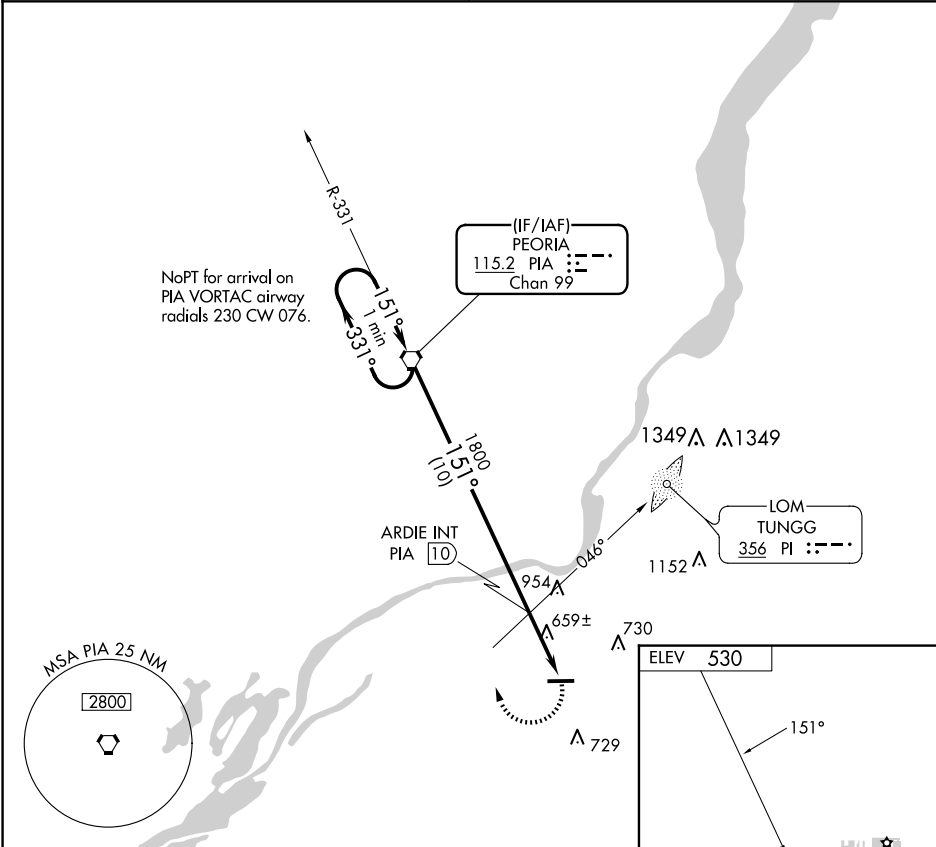

One Minute Holding Pattern				2100	PIA
2100 ← 331°				151° →	PIA
PIA VORTAC				ARDIE INT PIA 10	PIA 12.5
1800				10 NM	2.5 NM
CATEGORY	A	B	C	D	FAF to MAP 2.5 NM
CIRCLING	1060-1	530 (600-1)	1100-1½ 570 (600-1½)	1360-2¾ 830 (900-2¾)	Knots Min:Sec
					60 90 120 150 180 2:30 1:40 1:15 1:00 0:50