# THRNE THREE ARRIVAL (RNAV) Transition Route

(THRNE.THRNE3) 29MAR18

BURBANK, CALIFORNIA

(THRNE.THRNE3) 18088

THRNE THREE ARRIVAL (RNAV) Transition Route

AL-67 (FAA)

BURBANK, CALIFORNIA

SOCAL APP CON
126.7 370.95
BOB HOPE D-ATIS
134.5
BURBANK TOWER
118.7 254.3
SANTA MONICA ATIS
119.15
SANTA MONICA TOWER★
120.1 257.8
VAN NUYS ATIS
127.55
VAN NUYS TOWER★
119.3 239

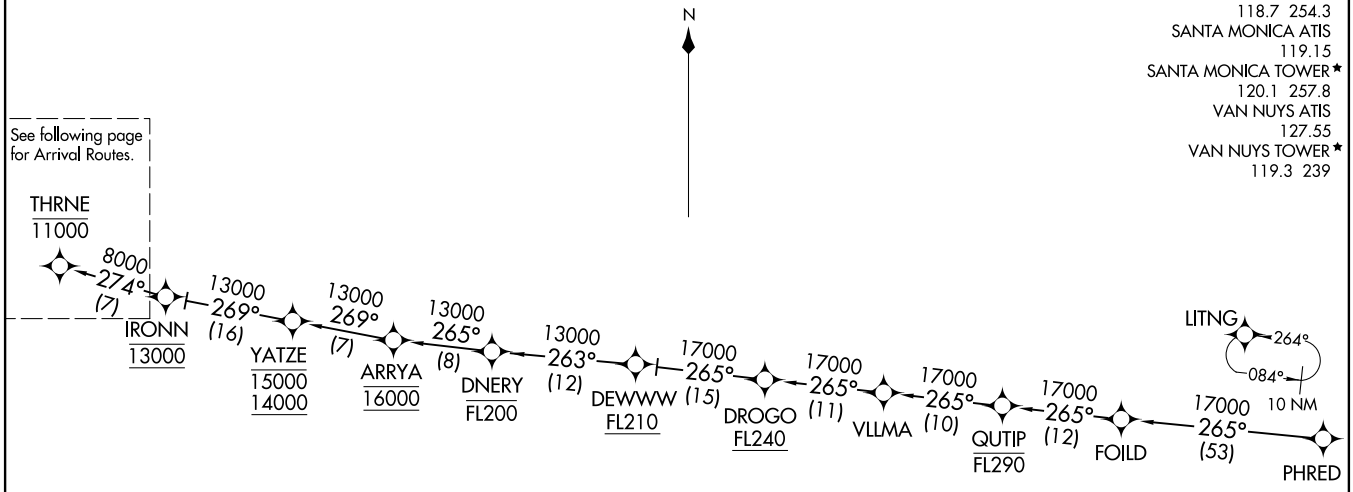


NOTE: RADAR required.

NOTE: RNAV 1.

NOTE: DME/DME/IRU or GPS required.

NOTE: Turbojet and turboprop aircraft only.

NOTE: Expect local area altimeter setting reaching FL200.

NOTE: Chart not to scale.

(CONTINUED ON FOLLOWING PAGE)

PHRED TRANSITION (PHRED.THRNE3)