LOC I-VCV	APP CRS	Rwy Idg	15050
108.75	166°	TDZE	2825
		Apt Elev	2885

ILS or LOC RWY 17

SOUTHERN CALIFORNIA LOGISTICS (VCV)

When local altimeter setting not received, use Edwards AFB altimeter setting and increase all DA and MDA 160 feet. Increase all visibilities ½ mile. DME from VCV VOR/DME. Simultaneous reception of I-VCV and VCV DME required. Circling NA for Cats C and D southeast of Rwys 35 and 21.

MISSED APPROACH: Climb to 3500, then climbing right turn to 6000 via heading 300° and VCV VOR/DME R-269 to ETHER INT and hold.

ATIS ★	JOSHUA APP CON	VICTORVILLE TOWER ★	GND CON
135.475	124.55 363.0	118.35 (CTAF) L 282.225	124.45

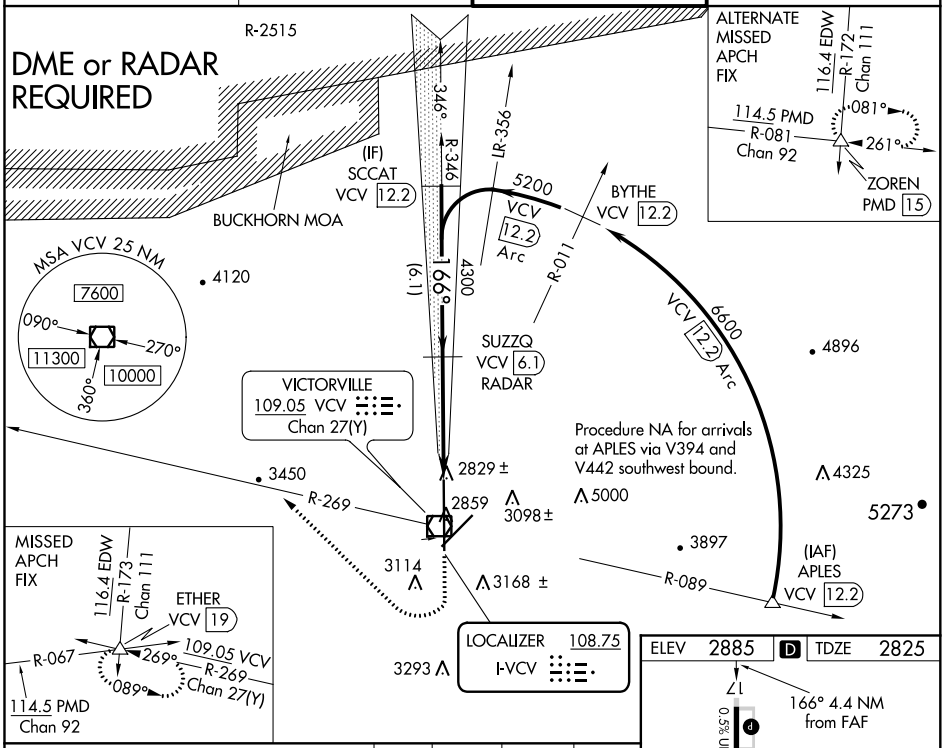

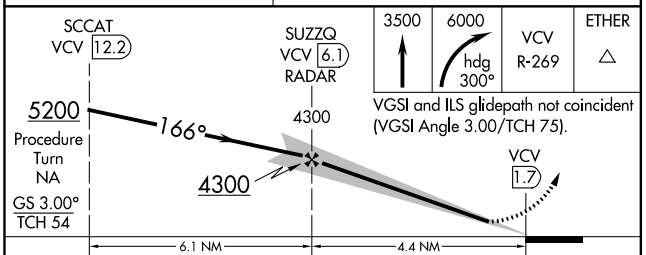

CATEGORY	A	B	C	D
S-ILS 17	3025/40 200 (200-¾)			
S-LOC 17	3080/50 255 (200-1)			
CIRCLING	3360-1 475 (500-1)	3420-1 535 (600-1)	3580-2 695 (700-2)	3780-3 895 (900-3)

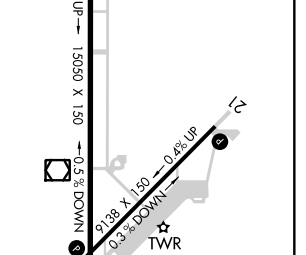

FAF to MAP 4.4 NM

Knots	60	90	120	150	180
Min:Sec	4:24	2:56	2:12	1:46	1:28

SW-3, 15 JUL 2021 to 12 AUG 2021
SW-3, 15 JUL 2021 to 12 AUG 2021