



LOC I-MDH	APP CRS	Rwy Idg	6506
110.9	182°	TDZE	407
		Apt Elev	411

ILS or LOC RWY 18L

SOUTHERN ILLINOIS (MDH)

ADF required.	MALS R	MISSED APPROACH: Climb to 2100 then climbing right turn to 2400 direct CABBI LOM and hold.
Circling Rwy 6, 36L NA at night.		

ATIS 119.725	KANSAS CITY CENTER 127.475 346.275	SOUTHERN TOWER ★ 125.35 (CTAF) 322.4	GND CON 121.8	UNICOM 122.95
-----------------	---------------------------------------	---	------------------	------------------

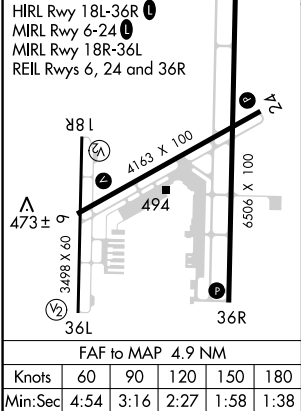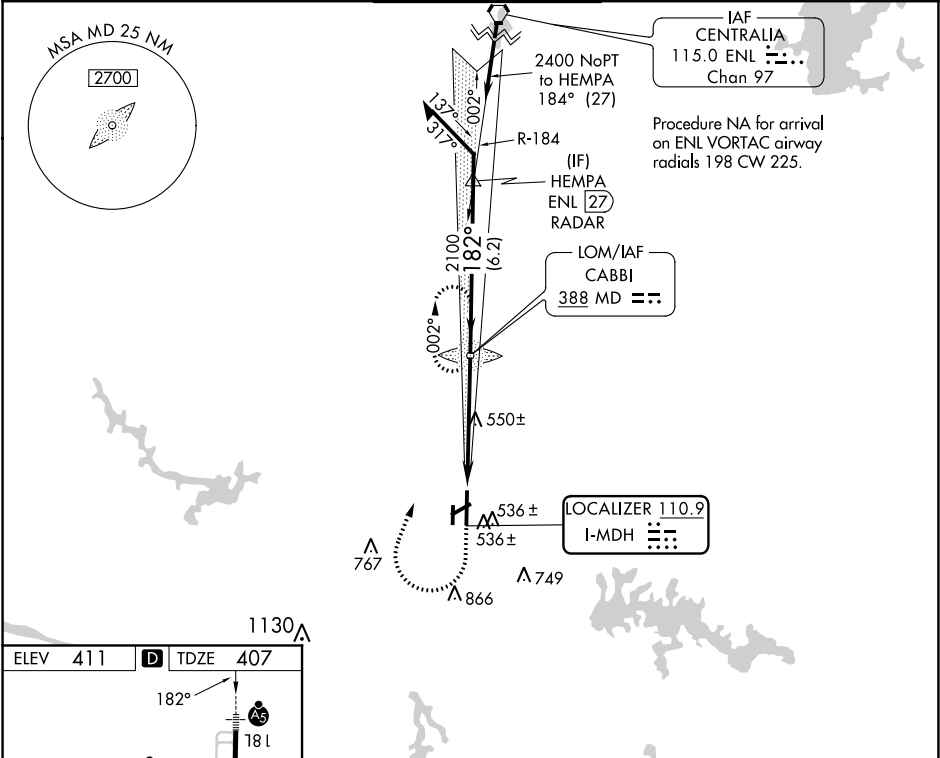

2100	2400	MD	MD LOM	Remain within 10 NM
↑	↪	↻	2037	002°
			2400	182°
			2100	GS 3.00° TCH 55'
			4.9 NM	
CATEGORY	A	B	C	D
S-ILS 18L	607-½	200 (200-½)		
S-LOC 18L	800-½	393 (400-½)	800-⅝	393 (400-⅝)
CIRCLING	900-1 489 (500-1)	920-1 509 (600-1)	1180-2¼ 769 (800-2¼)	1180-2½ 769 (800-2½)