

## CONTINUED FROM PRECEDING PAGE

AIRSPACE: CLASS D.

RADIO AIDS TO NAVIGATION: NOTAM FILE LFI.

(L) TACAN Chan 70 LFI (112.3) N37°05.13' W76°21.56' at fld. 7/10W.

TACAN AZIMUTH unusable:

252°-278° byd 20 NM

278°-342°

357°-033° byd 20 NM

DME unusable:

103°-165° byd 30 NM

ILS 109.9 I-LFI Rwy 08. No NOTAM MPs unsked; for sys downtimes coord thru 1 oss/osa

ILS 109.9 I-ABM Rwy 26. Class IB. No NOTAM MPs unsked; for sys downtimes coord thru 1 oss/osa.

## LAWRENCEVILLE

BRUNSWICK CO (LVL)(KLVL) 3 E UTC-5(-4DT) N36°46.37' W77°47.66'

329 B NOTAM FILE DCA

RWY 18-36: H3020X50 (ASPH) S-12.5 MIRL 0.6% up N

RWY 18: Pole.

RWY 36: Road.

RWY 06-24: 1890X70 (TURF) 1.7% up NE

RWY 06: Tree.

RWY 24: Tree.

SERVICE: LGT MIRL Rwy 18-36—CTAF temp OTS.

AIRPORT REMARKS: Attended Fri-Sun 1300-2100Z†. Arpt attended irregularly. Arpt attended Memorial Day, Independence Day and Labor Day. Rwy 06-24 CLOSED permly. Deer on and invof arpt. Rwy 18-36 markings in poor condition. No visible centerline. Old Rwy 36 displaced threshold markings showing thru.

AIRPORT MANAGER: 434-848-2767

WEATHER DATA SOURCES: AWOS-3 119.625 (434) 848-2017.

COMMUNICATIONS: CTAF/UNICOM 122.8

® WASHINGTON CENTER APP/DEP CON 118.75

RADIO AIDS TO NAVIGATION: NOTAM FILE DCA.

LAWRENCEVILLE (L) (L) VORTACW 112.9 LVL Chan 76 N36°49.08' W77°54.18' 125° 5.9 NM to fld. 350/8W.

VOR unusable:

090 blo 7,000'

090 byd 20 NM

091°-105°

106 blo 7,500'

106 byd 27 NM

107°-170°

171°-280° blo 6,000'

201°-325° byd 17 NM blo 9,000'

326°-089°

TACAN AZIMUTH unusable:

Blw 3,000'

VOR OTS indef


DME unusable:

Blw 3,000'

WASHINGTON

L-36G

IAP

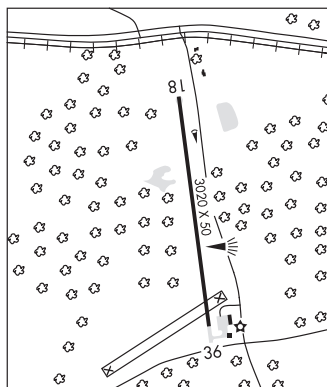

LEE CO (See JONESVILLE on page 355)